

Projector

User Guide

Version: V3.0

Please read this user's guide carefully before operating the projector, and save this guide for future use.

English

Thank you for purchasing our projector

Please read this user's guide carefully before operating the projector, and save this guide for future use.

If you have any further enquiries or need any further assistance, please contact us

Precautions for Use



Follow these safety instructions and read these helpful tips before setting up and using the projector.

Important Safety Instructions

	Do not disassemble the projector. If needed, please contact your dealer for repair/replacement.
	Do not use the different power source, it may result in fire or electric shock. Please use the indicated type of power source.
	Do not look into the lens when the projector is operating. The bright light may damage your eyes.
	Do not use the projector near water or sources of heat.
	Place the projector on an even surface or stable stand. If the projector is mounted on a ceiling, it should be installed by qualified mounting hardware which designed for use with this projector.
	Unplug the projector after powering down.
	In order to maintain the performance and reliability of the projector, please leave at least 30CM between the projector and the wall.


Helpful Tips

For incredible clarity and optimum results, operating the projector in a dark environment is recommended.

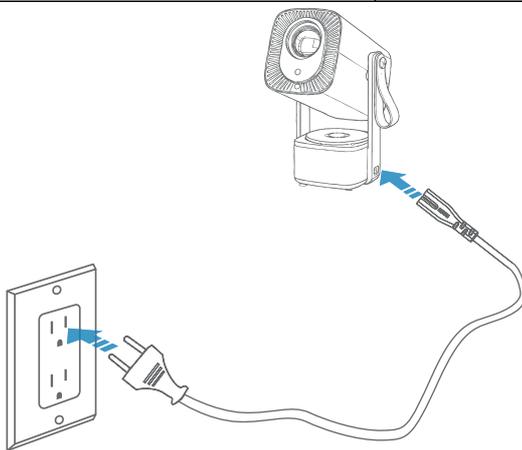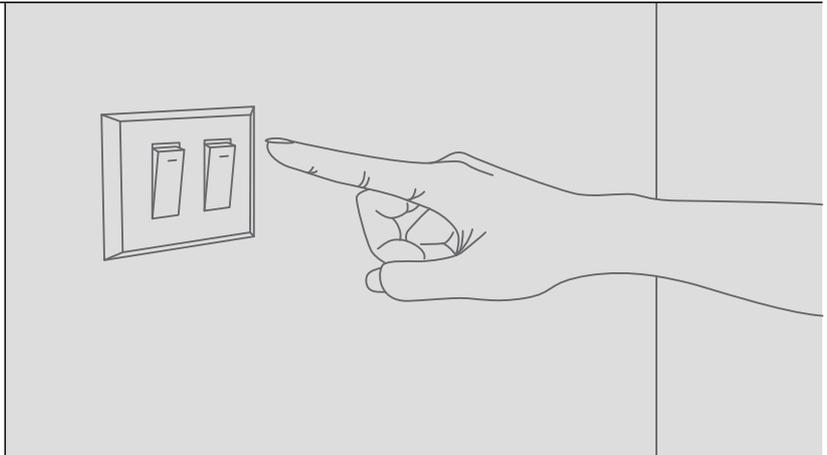



Connect the projector to the power socket using the power cord.

Please understand that the projector makes noise for heat dissipation during working. Nevertheless, it will not affect watching experiences when connected to an audio device.

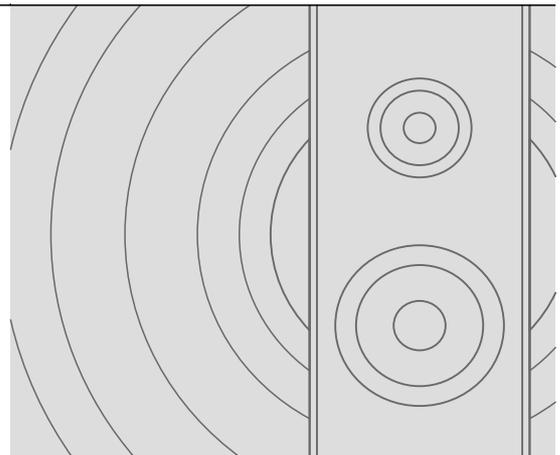


Projector is ideal for home entertainment, such as videos watching, photos viewing and games playing etc. Please be advised that the projector is not for business data presentation.

Native Resolution 1920x1080
Pixels, Max Supported 4K.

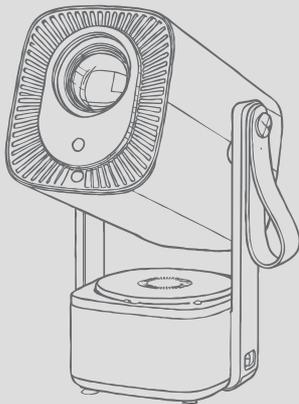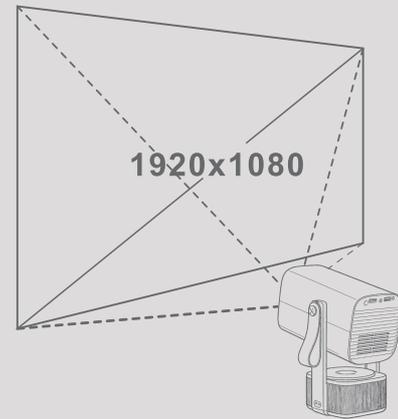

With Dolby Audio, you can enhance the sound of your listening experience on movies, TV shows, music and games from multiple levels. To provide you with a vibrant listening experience that further enhances the appeal of entertainment.


This projector supports the wireless function of mirroring the screen with a smartphone. It needs to be in the same WIFI network as the projector, and the screen mirroring function on the phone should be turned on. Then the screen image of the phone will be displayed on the projector.

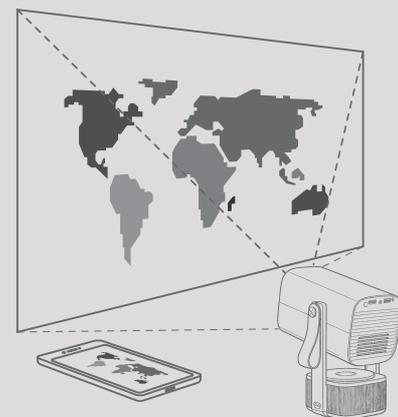


Projector Features

projector includes these special and outstanding features:

Incredible Watching Experiences

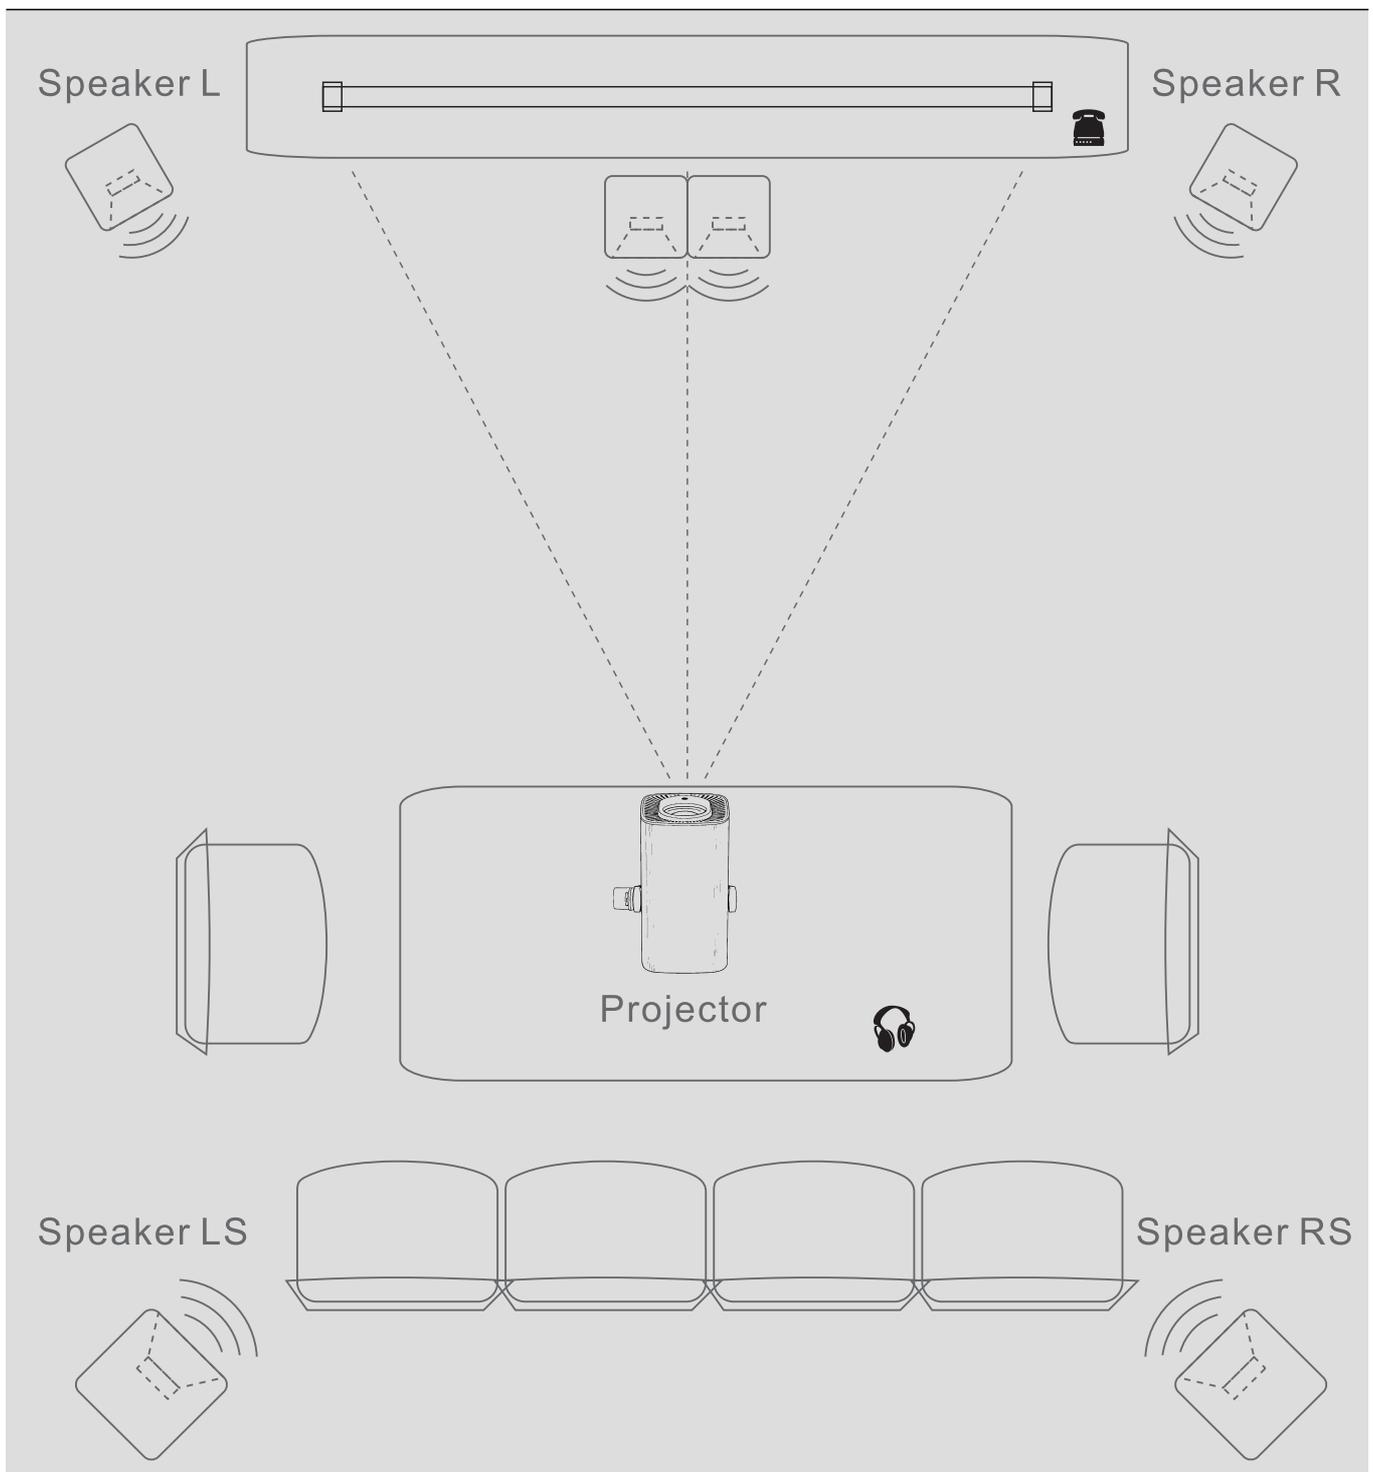


Projector Part Locations

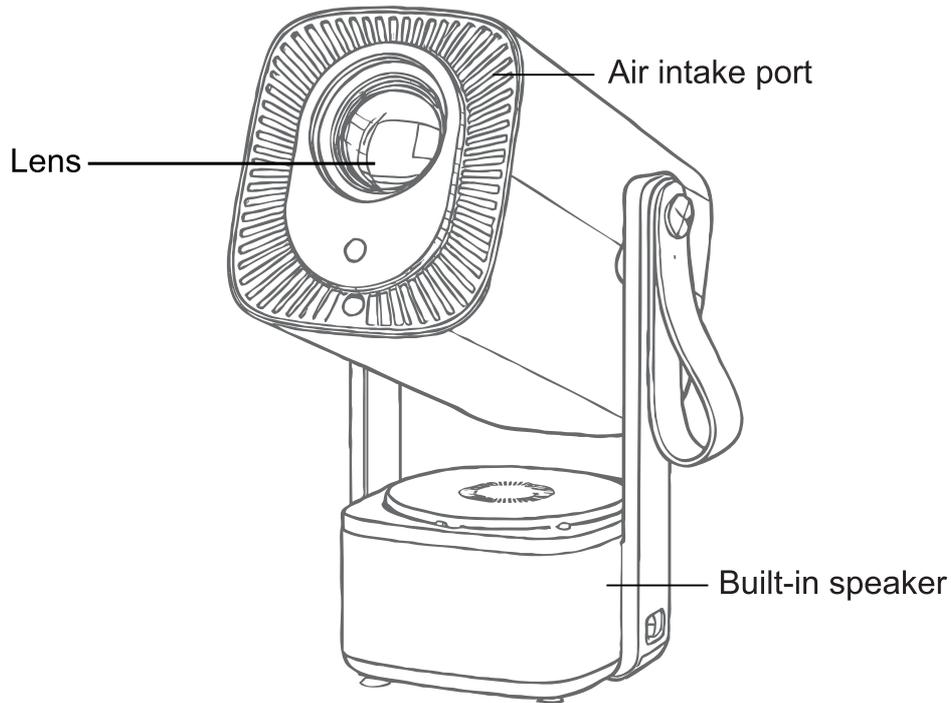


port/key

- 1.switch
- 2.HDMI port
- 3.Audio interface
- 4.USB port
- 5.IR receiver

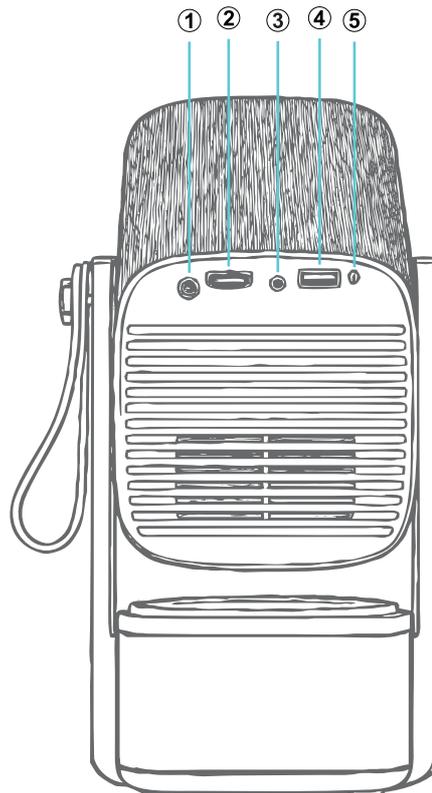


Interface connection operation

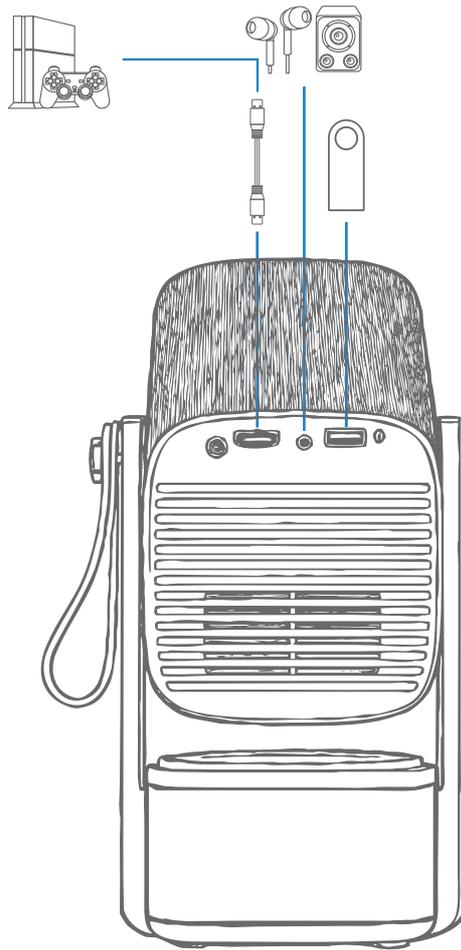

Projection Distance and Screen Size


The throw distance, zoom factor, aspect ratio, and other settings determine the approximate size of the image. Please refer to the following table for the relationship between projection distance and image size.

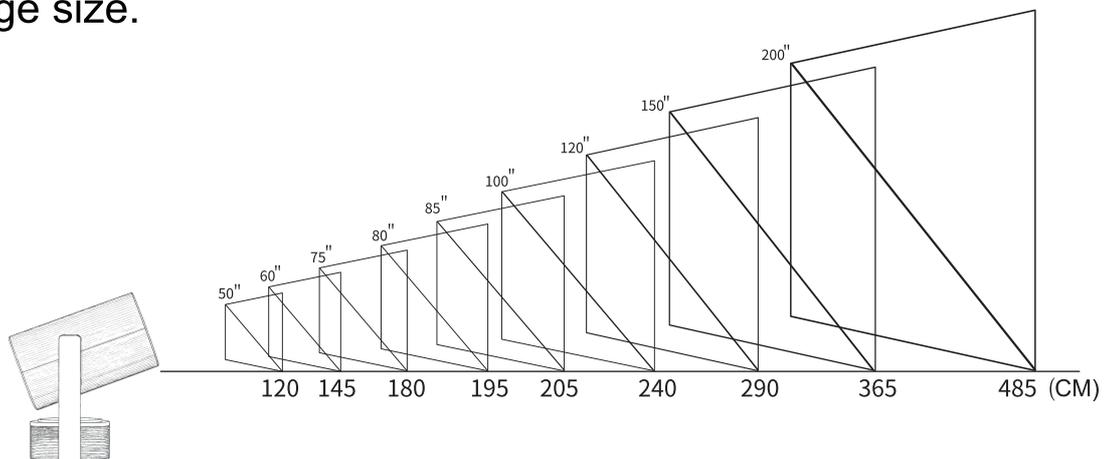

Setting Up the Projector

Before projecting, please be familiar with the following suggestions of placement, installation and adjustment.


Projector Placement and Installation

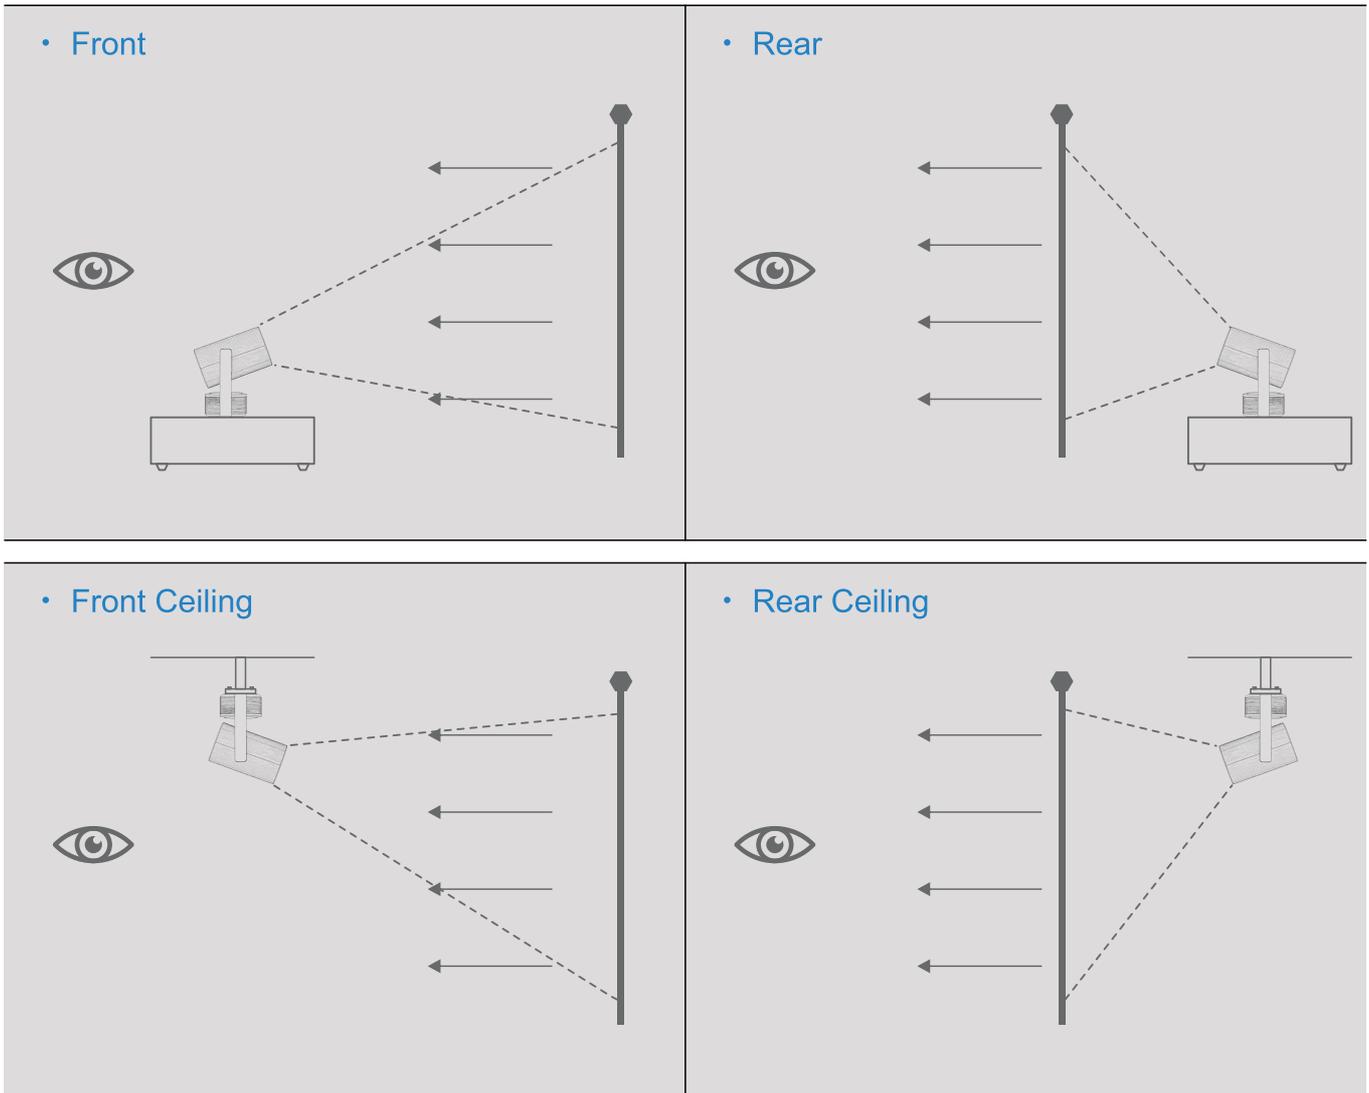

Whether the way you choose to project your images or videos, please keep these suggestions in mind:

1. Ensure the place you set the projector is sturdy and even;
2. Do not block the vents and always leave enough space for heat dissipation;
3. If the way you project is from the ceiling or from the rear, please ensure to select the correct projection option in the menu system.


Remote Control

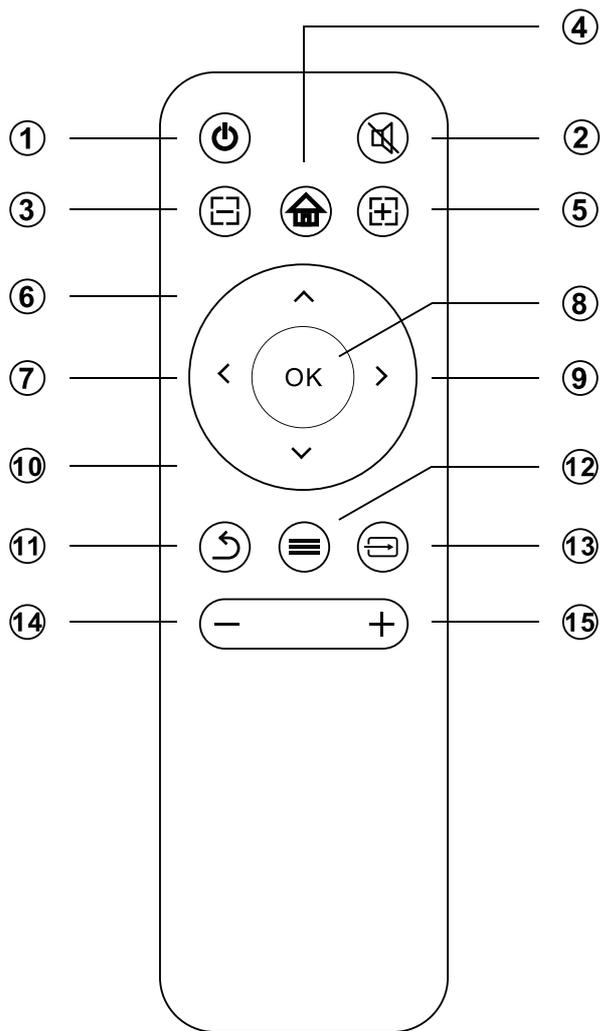

- 1.Power
- 2.Mute
- 3.Focus-
- 4.Home
- 5.Focus+
- 6.UP
- 7.Left
- 8.OK
- 9.Right
- 10.Down
- 11.Return
- 12.Reset Key (4-point trapezoidal correction)
- 13.Signal Source
- 14.Vol-
- 15.Vol+


Power on/off the Projector

- Power on the projector

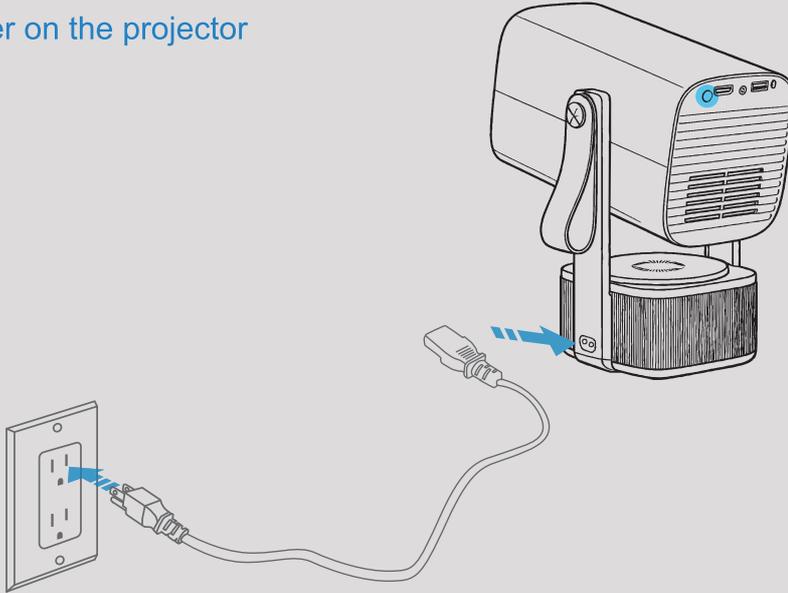

Indicator light will on after plugging in the power cord. Then press the Power button on the rear of projector or on the remote control, it enters into multimedia interface within 2 to 5 seconds.


- Power off the projector

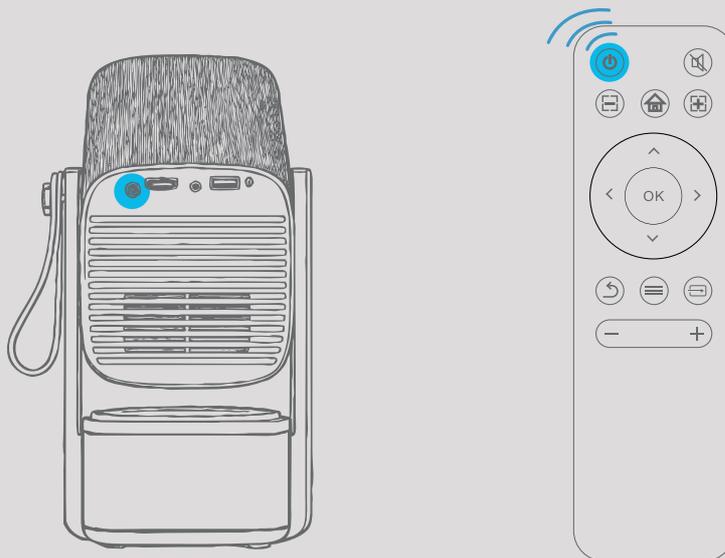


Press the Power button on the rear of Projector or on the remote control, the projector will shut off.

Projector Adjustment

The machine will automatically focus, and you can also adjust it to a clear eFect by using the focusing button on the remote control.

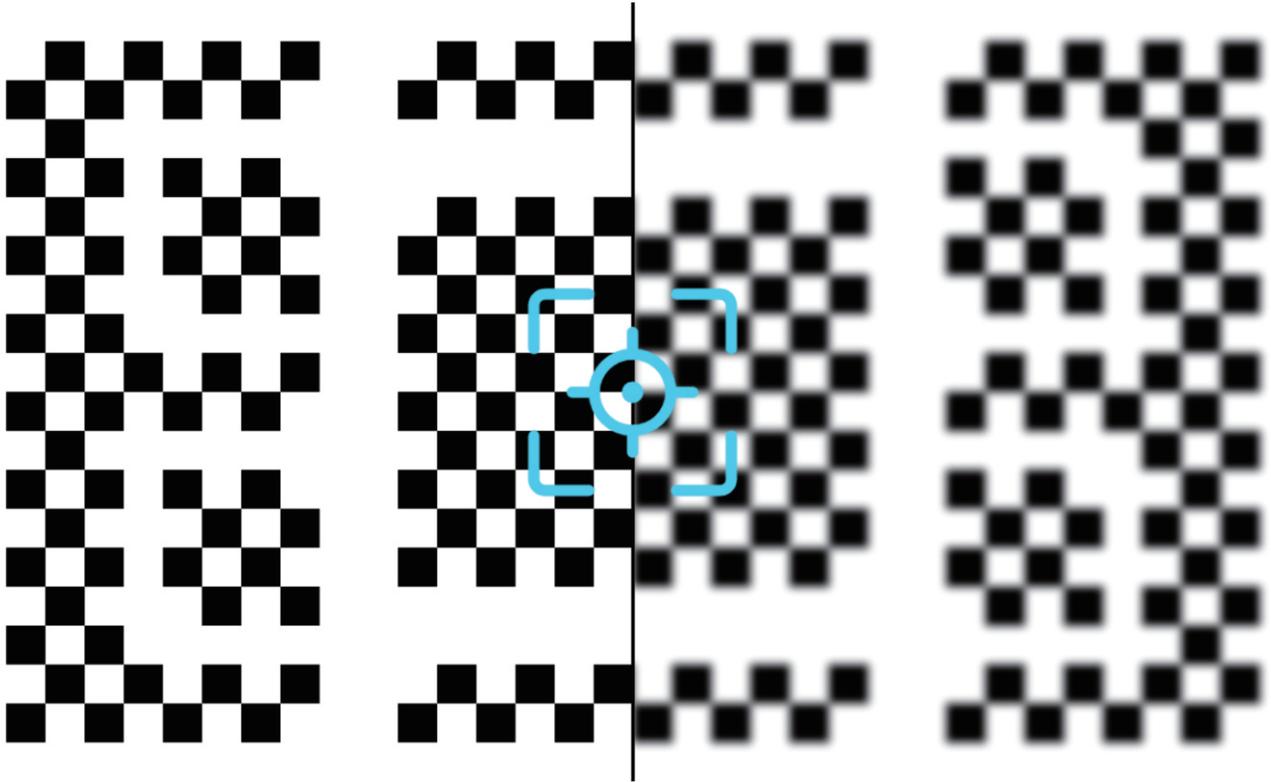


After the projector is turned on, it will automatically perform the trapezoidal correction. If you need to make manual adjustments, please go to the "Project Settings - Keystone" section to make the settings.

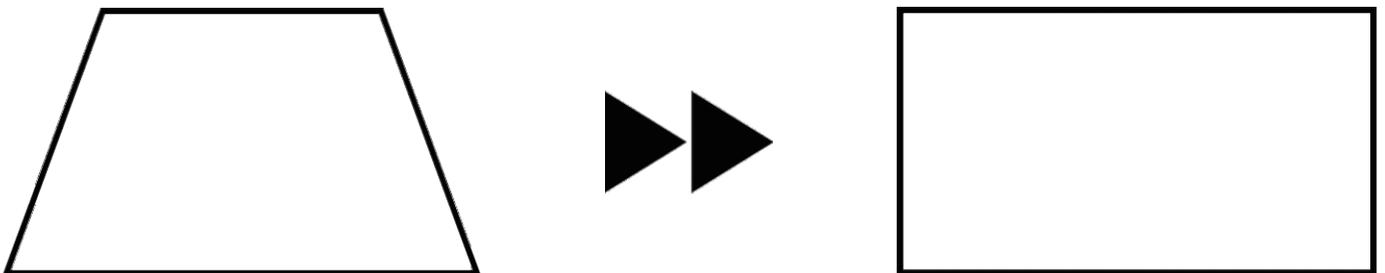


Connect to WIFI

Enter the settings interface - Connect Wi-Fi

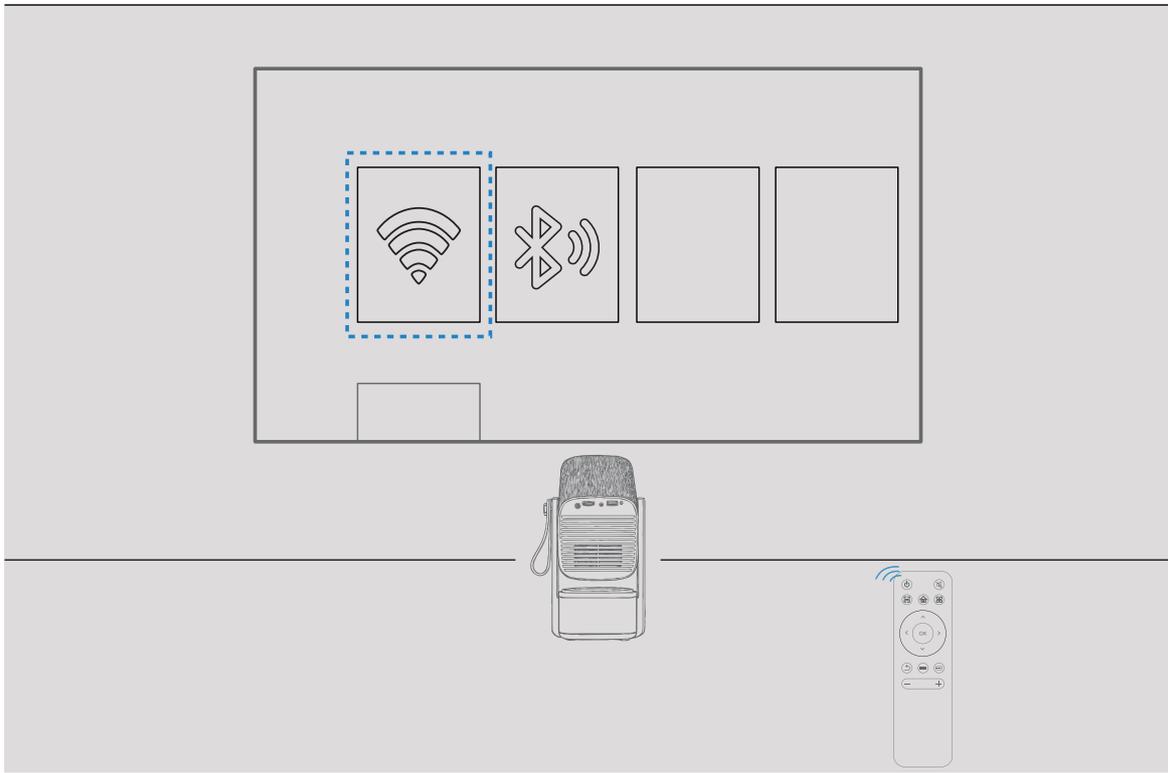


Connect to Bluetooth

Enter the settings interface - Connect Bluetooth

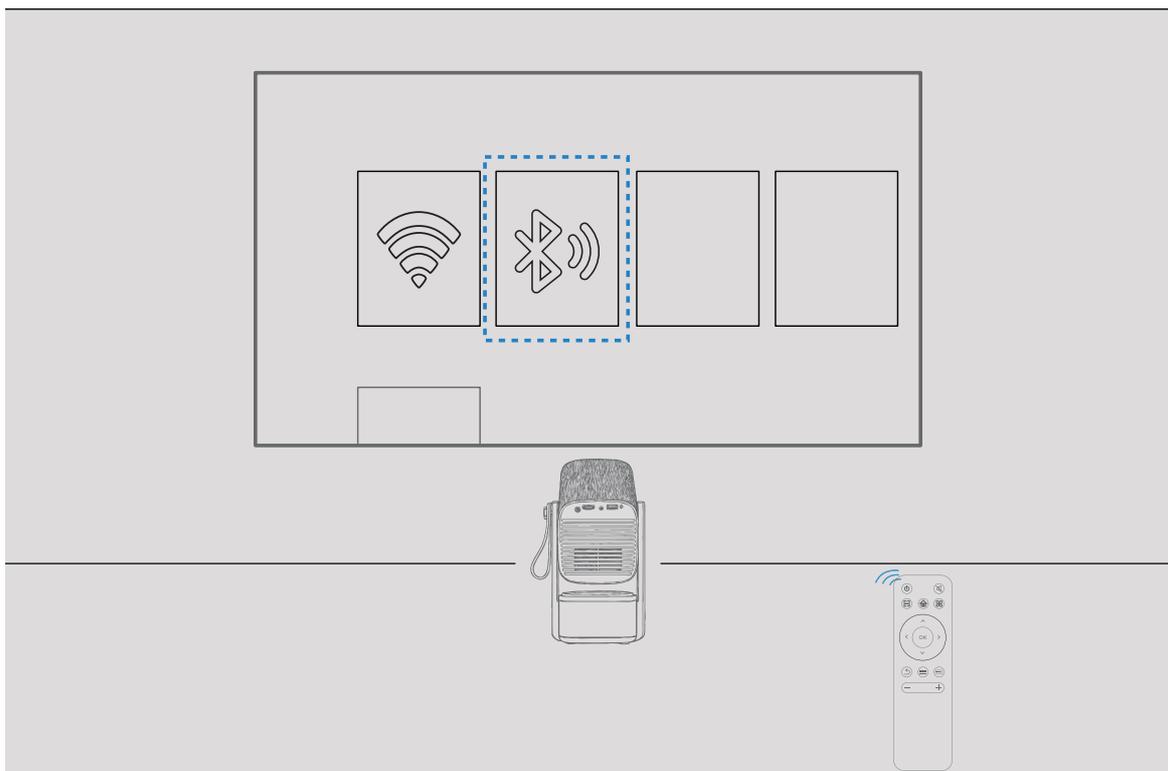


APP operation


Select the desired app on the remote control, click "OK", and start playing the content.

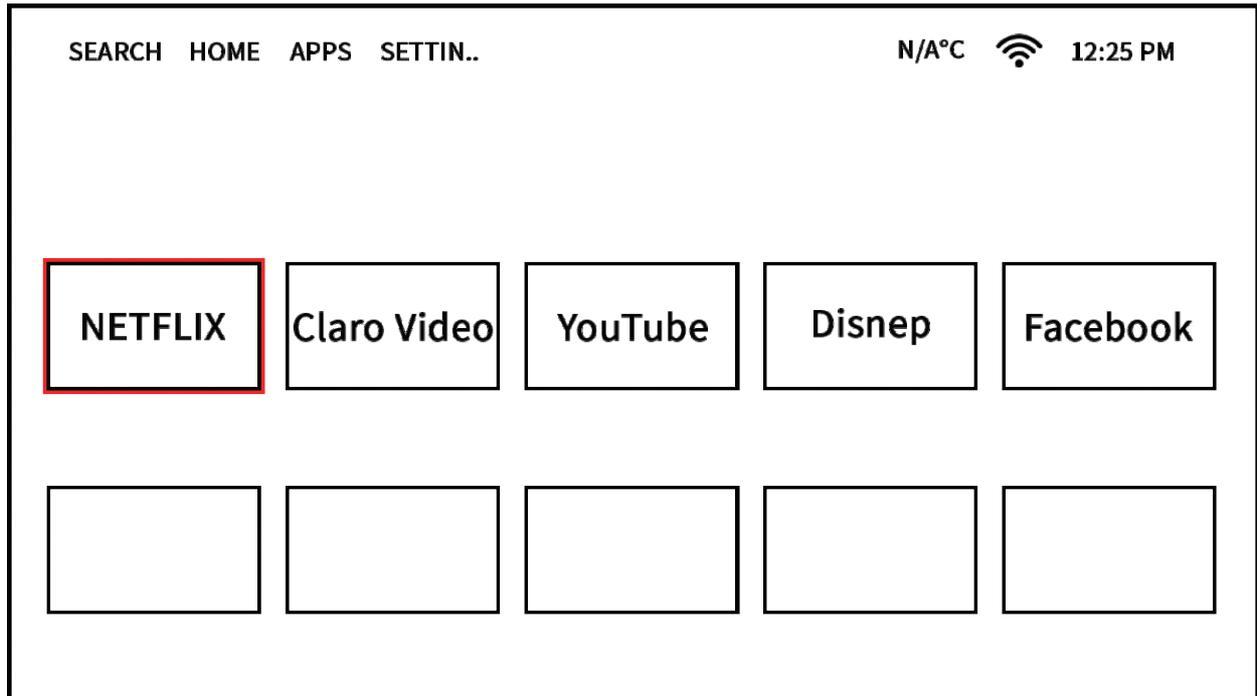

Projection system high-definition channel operation

Use the remote control to select the signal source icon . On the interface, the signal source will be displayed. Select HDMI and connect the computer and the projector using an HDMI cable.

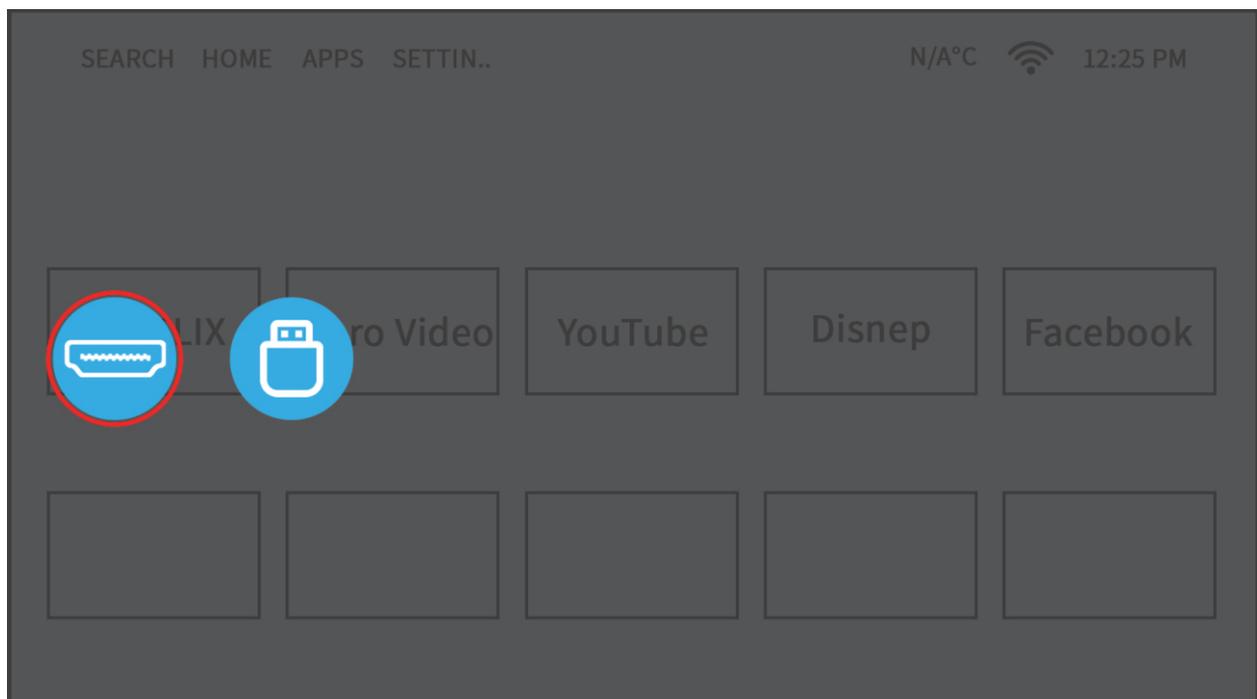

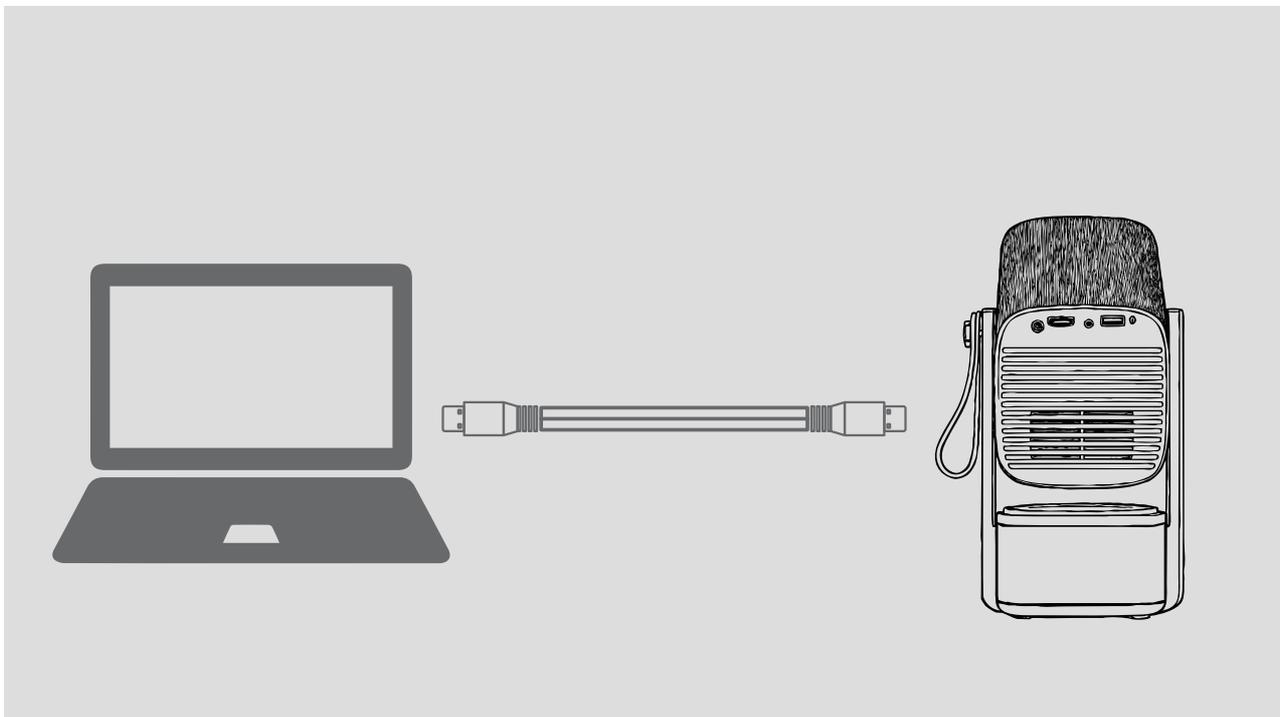

Connecting to a computer

The shortcut keys for output signals from different brands are different. See the computer manual for details.

(1) Press the windows key  + P key on the keyboard and select "Copy".

(2) Find the button of the "  symbol on the F1~F12 buttons on the keyboard, and press the Fn button at the same time to select "Copy".



Common key combinations are as follows:

Lenovo	Fn+F3
Dell	Fn+F8
HP	Fn+F4
ThinkPad	Fn+F7
Asus	Fn+F8
Acer	Fn+F5
Samsung	Fn+F4
Sony	Fn+F7


Fujitsu	Fn+F10
Haier	Fn+F3
NEC	Fn+F3
Panasonic	Fn+F3
Sharp	Fn+F5
Hitachi	Fn+F7
TOSHIBA	Fn+F5

Note: The above content is for reference only, please refer to the computer manual

Projector Cleaning and Maintenance

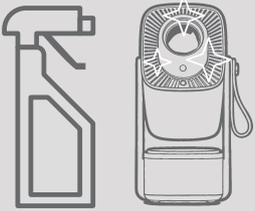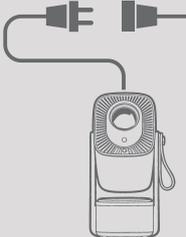	<p>For optimum watching experiences and longer lifetime, please clean the projector periodically.</p>
	<p>For projector maintenance, please seek help from or under the guidance of specified persons.</p>
	<p>If it is necessary to replace any parts of the projector, please feel free to contact the dealer or qualified customer service team.</p>
	<p>Before cleaning and maintaining the projector, please turn off the projector and unplug the power cord.</p>

Projector Cleaning

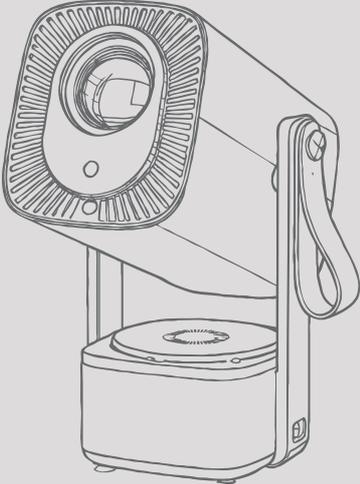


Always keep the projector clean to avoid affecting images quality and ventilation system during working caused by dust, dirt and smudge.



Cleaning the Projector Case

Use a piece of dry, soft and lint-free cloth to remove dust or dirt;

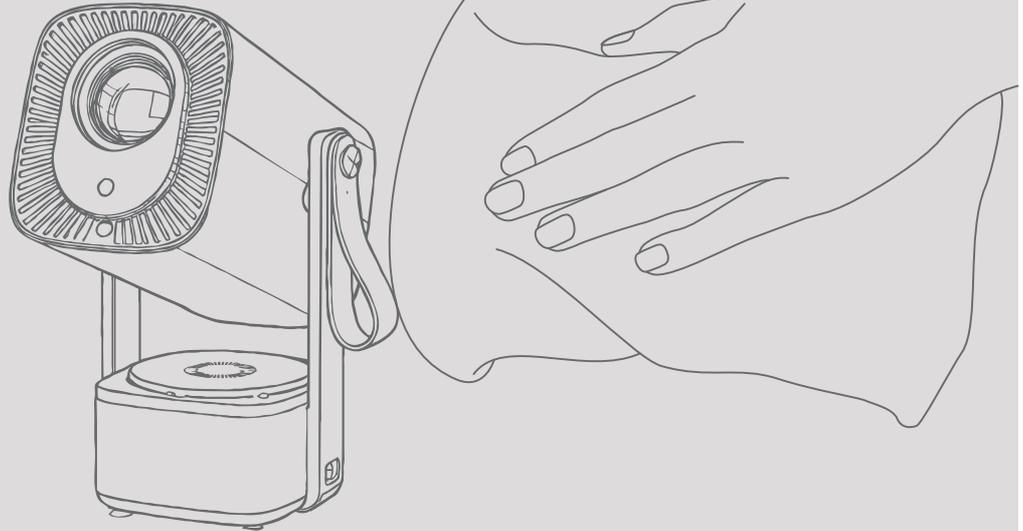


Use a piece of moistened and soft cloth with a little water and mild soap to remove stubborn dirt.

Cleaning the Lens

Gently wipe the lens with a piece of dry and non-abrasive cloth or paper to remove dust or dirt;




Gently wipe the lens by a piece of moistened (with a little water), non-abrasive and lint-free cloth to remove stubborn dirt.

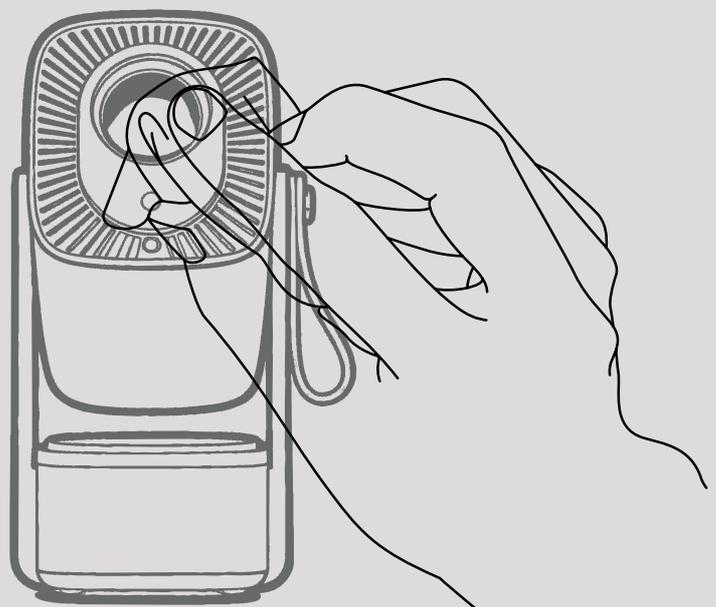


Cleaning the Vents

Use a soft brush or a special designed small vacuum to remove the dust.

- Note: For cleaning process, do Not spray any liquid (included water) directly on any parts of the projector. Do Not use the chemical liquid to clean the projector which will damage the projector.

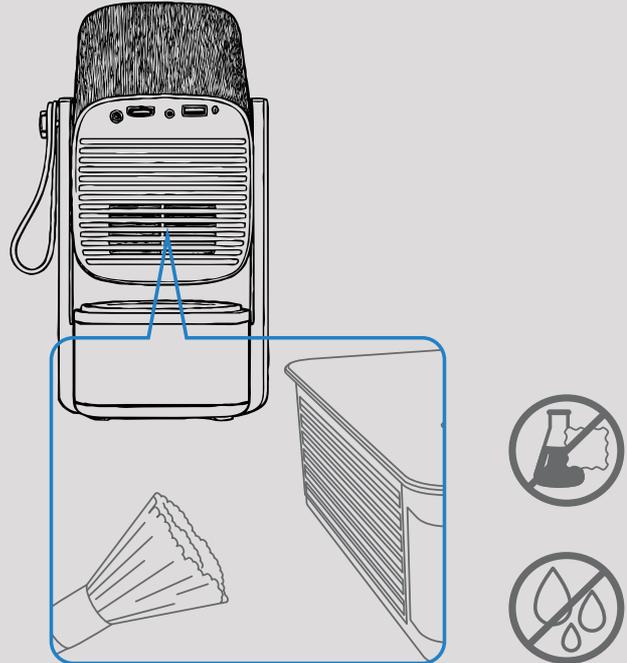

Batteries Replacement of the Remote Control

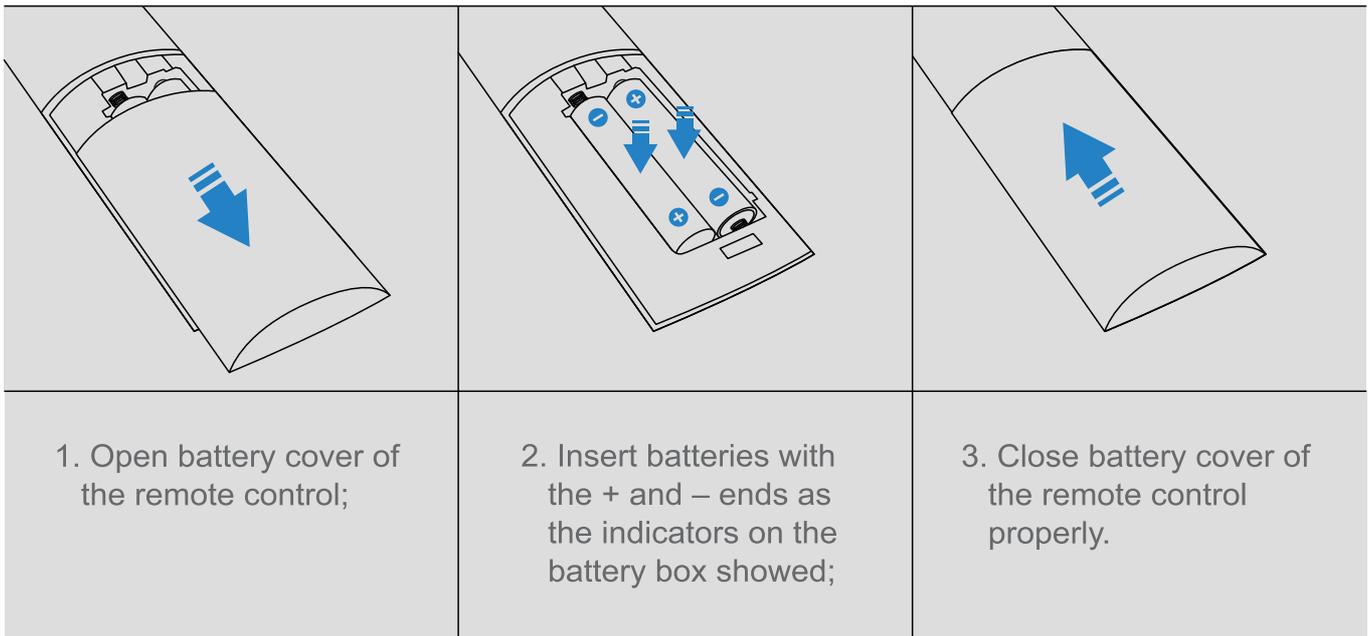

Projector Maintenance

For this part, we only offer the basic maintaining suggestions. If you have any further requirements (replacement or repair), please contact the dealer or qualified customer service team.

Technical Specifications

To know product better and use projector properly, please read the table below:

Imaging Technology	3.5" LCD Screen
Native Resolution	1920 x 1080 pixels
Maximum Supported Resolution	4K
Light	LED
Lens	Multichip Coated Lens (1080P)
Keystone	Electron Trapezium ± 25 Vertical/Horizontal
Screen Size	50-200 inches
Projection Distance	1.13-4.9M
Recommended Screen Size	60-100 inches
Projection Method	Front/Rear/Front Ceiling/Rear Ceiling
Display Ratio Screen Scale	4:3/16:9
USB/Max ROM	Support USB/Max Support 128G
Interface	1 x USB Port
	1 x 3.5mm Audio Jack
	1 x HDMI Port
Power Supply	AC 100-240V 50/60Hz
Supported Video Formats	AVI、DAT、MKV、MOV、MPG、MP4、RMVB、3GP、TS、VOB
Supported Audio Formats	AMR、FLAC、M4A、MP3、MP2、OGG、WAV
Supported Image Formats	Support JPG, JPEG, BMP, PNG
Supported File Format	TXT
Supported Languages	23 Languages

Troubleshooting

As a high-tech product, the projector combined with optical, mechanical and electronic components and equipped with a protective and complicated circuit inside. To quickly solve your problems and to prevent improper using and settings, please follow operations below. If your problems or enquiries cannot be eliminated after reading the table, please do not hesitate to contact us.

Problem Description	Troubleshooting
The projector won't turn on	Check if the power source is the indicated one and the power cord is connected correctly. Make sure the power cord is not defective.
Lamp does not work after turning on the projector	Ensure power cord and power source are connected correctly. If the lamp gets damages, please contact us to replace the lamp
No images	Check whether the format and resolution of images are supported by the projector.
No response from remote control	Check whether batteries of the remote control run out or are installed correctly. Make sure there is no obstacle between the remote control and IR receiver. Always use the remote control within its effective distance (4m).
Obscure/Blurred images	Please rotate the focus ring, adjust the keystone and throw distance until the projected image is clear. Ensure the lens is clean.
Abnormal sound	Ensure the audio device is connected correctly and function well. Check if the mute or minimum volume mode is set.



Gratitude for your engagement with this manual. Your effort is valued.

