 


Projector

User Guide

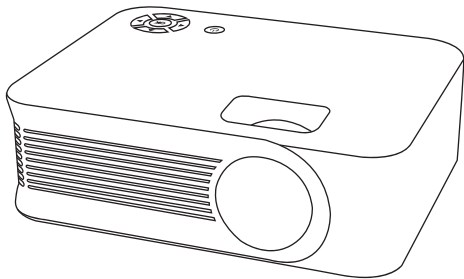

Please read this user's guide carefully before operating the projector, and save this guide for future use.

English

Thank you for purchasing our projector








Please read this user's guide carefully before operating the projector, and save this guide for future use.

If you have any further enquiries or need any further assistance, please contact us

Precautions for Use


Follow these safety instructions and read these helpful tips before setting up and using the projector.

Important Safety Instructions

	Do not disassemble the projector. If needed, please contact your dealer for repair/replacement.
	Do not use the different power source, it may result in fire or electric shock. Please use the indicated type of power source.
	Do not look into the lens when the projector is operating. The bright light may damage your eyes.
	Do not use the projector near water or sources of heat.
	Place the projector on an even surface or stable stand. If the projector is mounted on a ceiling, it should be installed by qualified mounting hardware which designed for use with this projector.
	Unplug the projector after powering down.
	In order to maintain the performance and reliability of the projector, please leave at least 30CM between the projector and the wall.


Helpful Tips

 For incredible clarity and optimum results, operating the projector in a dark environment is recommended.

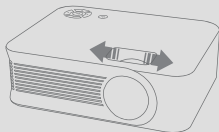

You may adjust the focus ring and keystone simultaneously until to get crystal clear images.

 
Please understand that the projector makes noise for heat dissipation during working. Nevertheless, it will not affect watching experiences when connected to an audio device.

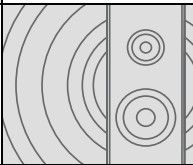

Projector is ideal for home entertainment, such as videos watching, photos viewing and games playing etc. Please be advised that the projector is not for business data presentation.

Easy-to-use Setup and Operation Features

 
- User-friendly operating system

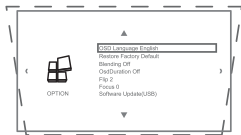

- Innovative keystone correction ring for flexible projector placement



 Product Box Contents



Projector



Remote control



 
Instruction manual



 
Power cord

Rear / Bottom

 
1. DC power input
2. USB port
3. HDMI port
4. SD card slot
5. Audio jack

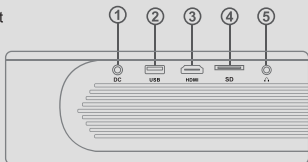



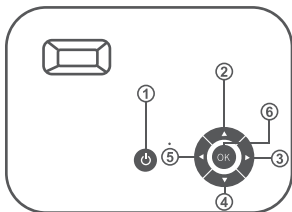



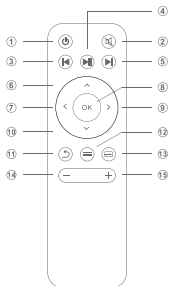







1. Power
2. UP
3. Right
4. Down
5. Left
6. OK



Remote Control




1. Power
2. Mute
3. Previous
4. Play/Pause
5. Next
6. UP
7. Left
8. OK
9. Right
10. Down
11. Return
12. Menu
13. Signal Source
14. Vol-
15. Vol+

 turns the projector on or off	 accesses projector menu system
 turns off sound	 cancels/exits functions
 selects upward movement	 selects of the input source
 selects leftward movement	 adjusts speaker volume
 selects rightward movement	 adjusts speaker volume
 selects downward movement	 selects previous Program
 selects and confirms options	 selects next Program


Projector Adjustment

 Except setting suitable throw distance, you can adjust keystone ring and focus/zoom ring manually before projecting your images or videos:

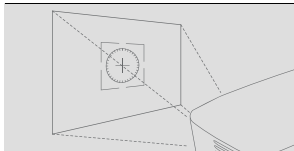

Rotate the focus ring to adjust the clarity of the projected image until it reaches to crystal clear.

 Introduction to Ports

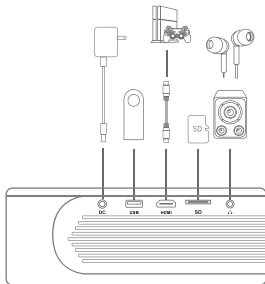


Basic Projector Operations


Basic operations provided help you to get started quickly.

Power on/off the Projector

 
- Power on the projector

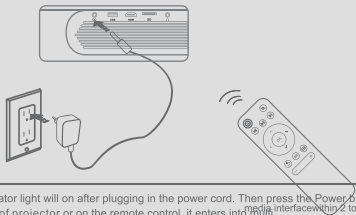

- Power off the projector

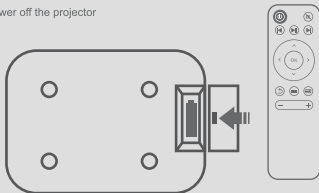 

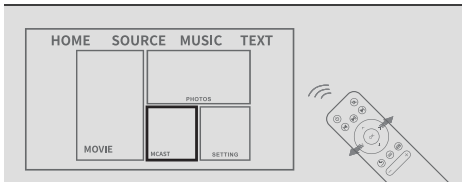 

Connecting to a device



Connecting to a computer

The shortcut keys for output signals from different brands are different. See the computer manual for details.

(1) Press the windows key  + P key on the keyboard and select "Copy".

(2) Find the button of the " " symbol on the F1~F12 buttons on the keyboard, and press the Fn button at the same time to select "Copy".


Common key combinations are as follows:

Lenovo	Fn+F3
Dell	Fn+F8
HP	Fn+F4
ThinkPad	Fn+F7
Asus	Fn+F8
Acer	Fn+F5
Samsung	Fn+F4
Sony	Fn+F7


Fujitsu	Fn+F10
Haier	Fn+F3
NEC	Fn+F3
Panasonic	Fn+F3
Sharp	Fn+F5
Hitachi	Fn+F7
TOSHIBA	Fn+F5

Note: The above content is for reference only, please refer to the computer manual

  Projector Menu Settings

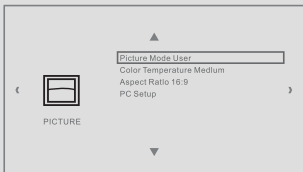



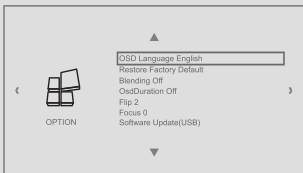

- Press the Menu button on the remote control to access to the menu interface. The menu interface allows you to set Picture, Sound, Time and Option. Choose the feature you want to set by pressing the Left/Right button on the remote control or on the control panel




- For detailed settings, press the UP/Down button to view options listed under Picture, Sound, Time and Option. Then press the Ok button to select options. (Some of these options have a submenu, press the Menu button to exit a submenu.)



Projector Cleaning and Maintenance

	<p>For optimum watching experiences and longer lifetime, please clean the projector periodically.</p>
	<p>For projector maintenance, please seek help from or under the guidance of specified persons.</p>
	<p>If it is necessary to replace any parts of the projector, please feel free to contact the dealer or qualified customer service team.</p>
	<p>Before cleaning and maintaining the projector, please turn off the projector and unplug the power cord.</p>

 Projector Cleaning

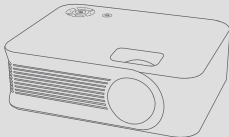


Always keep the projector clean to avoid affecting images quality and ventilation system during working caused by dust, dirt and smudge.




Cleaning the Vents

Use a soft brush or a special designed small vacuum to remove the dust.

 - Note: For cleaning process, do Not spray any liquid (included water) directly on any parts of the projector. Do Not use the chemical liquid to clean the projector which will damage the projector.

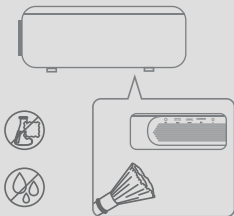

 Batteries Replacement of the Remote Control

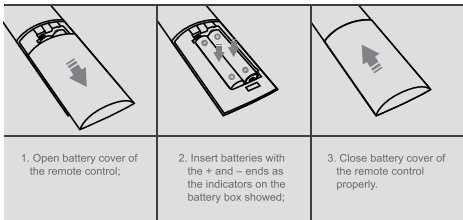

Projector Maintenance

For this part, we only offer the basic maintaining suggestions. If you have any further requirements (replacement or repair), please contact the dealer or qualified customer service team.

Technical Specifications

To know product better and use projector properly, please read the table below:

Imaging Technology	LCD
Native Resolution	800 x 480 pixels
Maximum Supported Resolution	1920 x 1080 pixels
Light	LED
Lens	Multichip Coated Lens
Projection Ratio	1.67:1
Aspect Ratio	16:9/4:3
Displayable Colors	3.84Million
Interface	1 x USB Ports
	1 x SD card slot
	1 x HDMI Port
	1 x Audio Jack
	1 x DC power input
Supported Video Formats	Full Formats
Supported Audio Formats	MP3/M4a
Supported Image Formats	Support JPG, JPEG, BMP, PNG
Supported File Format	TXT
Supported Languages	23 Languages
Product Size	160*120*55mm

Troubleshooting

As a high-tech product, the projector combined with optical, mechanical and electronic components and equipped with a protective and complicated circuit inside. To quickly solve your problems and to prevent improper using and settings, please follow operations below. If your problems or enquiries cannot be eliminated after reading the table, please do not hesitate to contact us.

Problem Description	Troubleshooting
The projector won't turn on	Check if the power source is the indicated one and the power cord is connected correctly. Make sure the power cord is not defective.
Lamp does not work after turning on the projector	Ensure power cord and power source are connected correctly. If the lamp gets damages, please contact us to replace the lamp
No images	Check whether the format and resolution of images are supported by the projector.
No response from remote control	Check whether batteries of the remote control run out or are installed correctly. Make sure there is no obstacle between the remote control and IR receiver. Always use the remote control within its effective distance (4m).
Obscure/Blurred images	Please rotate the focus ring, adjust the keystone and throw distance until the projected image is clear. Ensure the lens is clean.
Abnormal sound	Ensure the audio device is connected correctly and function well. Check if the mute or minimum volume mode is set.