 


# *PROJECTOR*

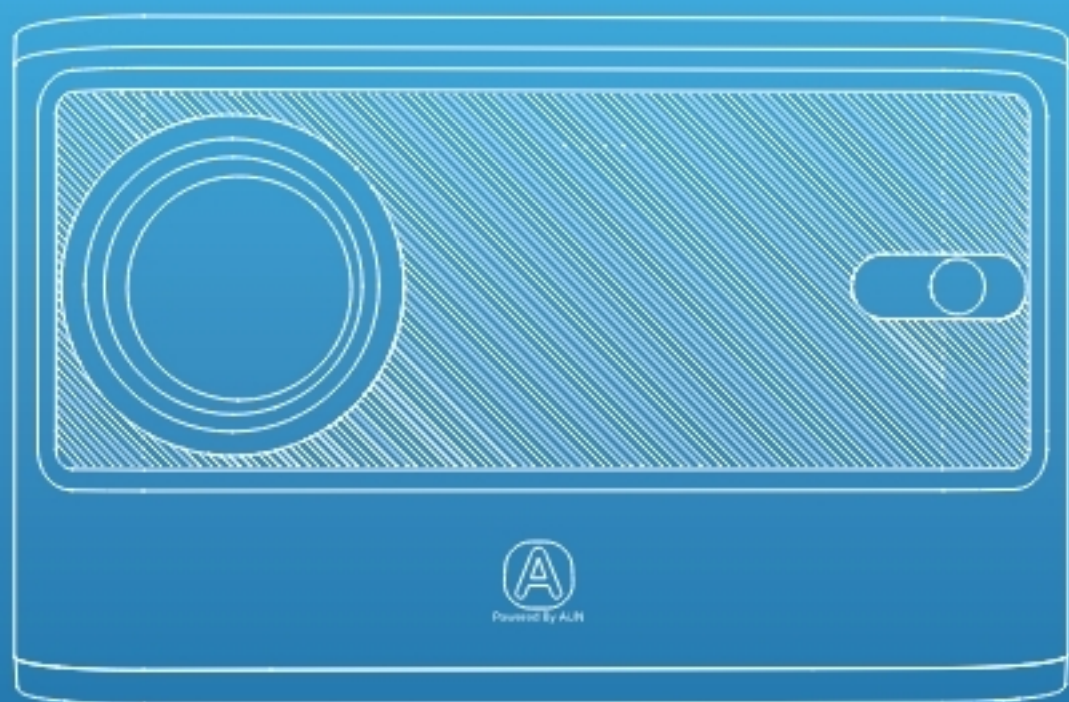

## User Guide

Please read this user's guide carefully before operating the projector, and save this guide for future use.

English










**Thank you  
for purchasing  
our projector**

---

**If you have any further enquiries or need any  
further assistance, please contact us**

# Precautions for Use

Follow these safety instructions and read these helpful tips before setting up and using the projector.

	Do not disassemble the projector. If needed, please contact your dealer for repair/replacement.
	Do not use the different power source, it may result in fire or electric shock. Please use the indicated type of power source.
	Do not look into the lens when the projector is operating. The bright light may damage your eyes.
	Do not use the projector near water or sources of heat.
	Place the projector on an even surface or stable stand. If the projector is mounted on a ceiling, it should be installed by qualified mounting hardware which designed for use with this projector.
	Unplug the projector after powering down.
	In order to maintain the performance and reliability of the projector, please leave at least 50CM between the projector and the wall.

 
 
## Helpful Tips

For incredible clarity and optimum results, operating the projector in a dark environment is recommended.




The image is blurry and can be adjusted by pressing the focus button on remote control

Please understand that the projector makes noise for heat dissipation during working. Nevertheless, it will not affect watching experiences when connected to an audio device.

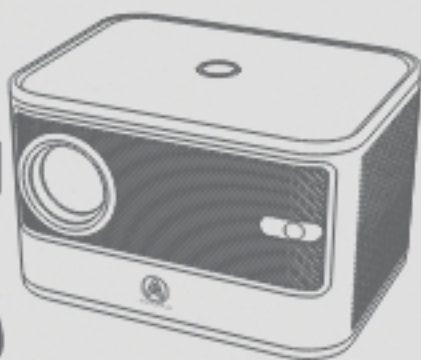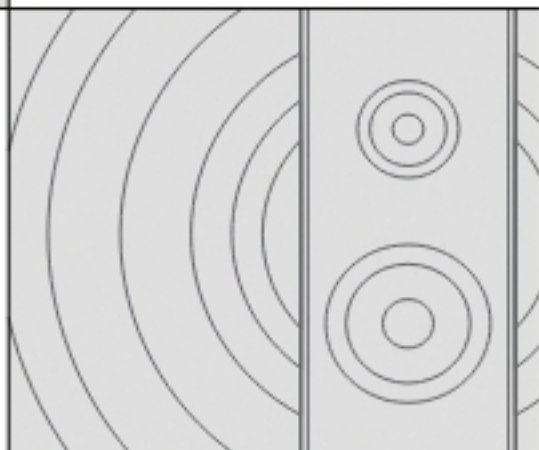

Projector is ideal for home entertainment, such as videos watching, photos viewing and games playing etc. Please be advised that the projector is not for business data presentation.

# Product Box Contents

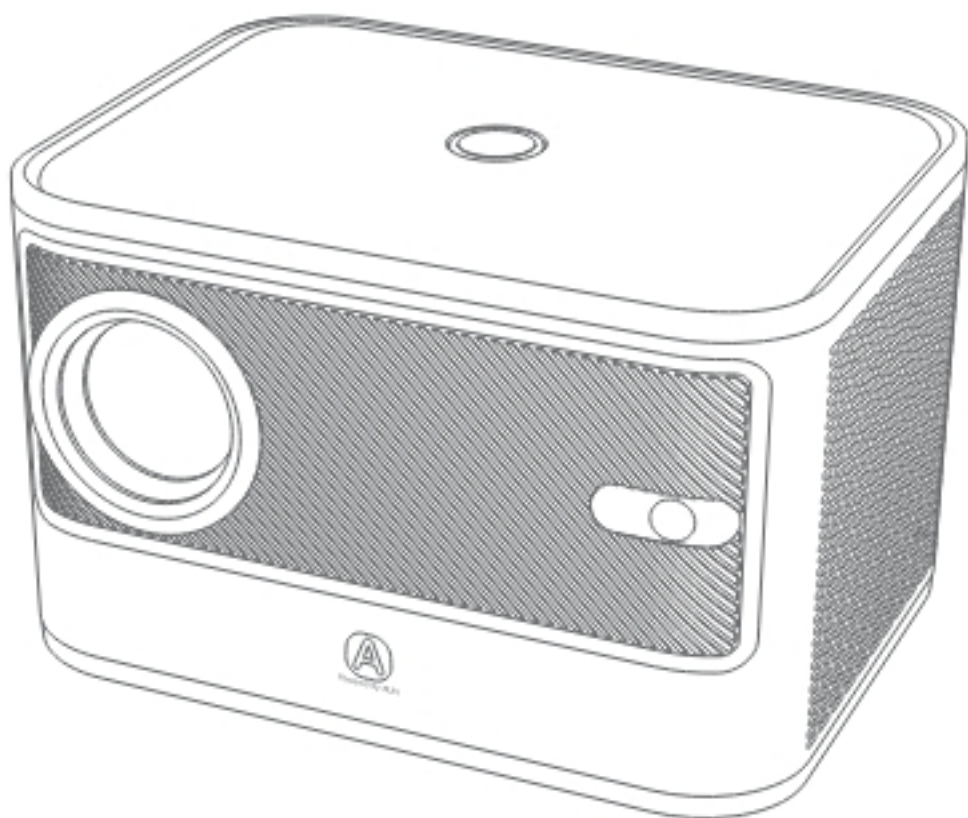 

**Projector**



**Remote control**



 
**Instruction manual**




**Power cord**

# Projector Part Locations


## Front/side

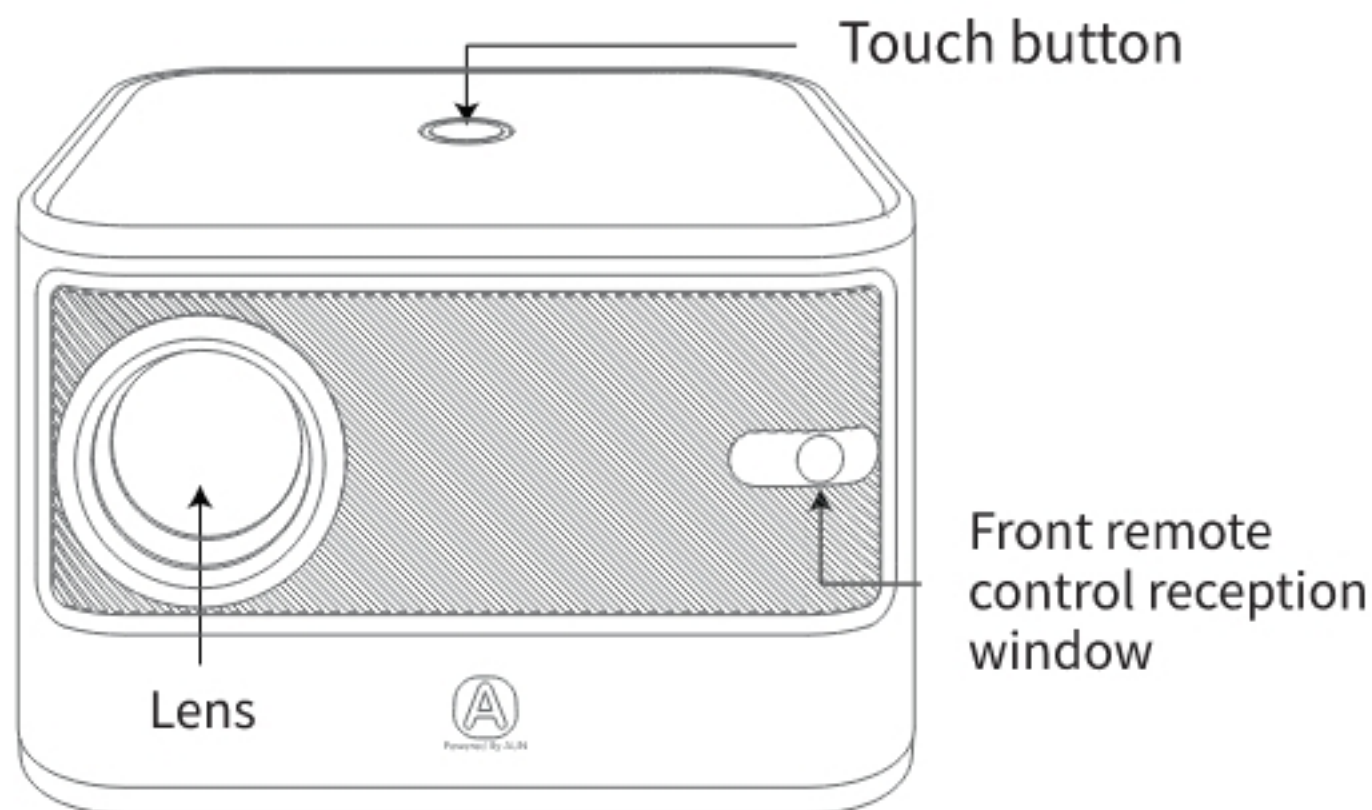

## The left side/The right side

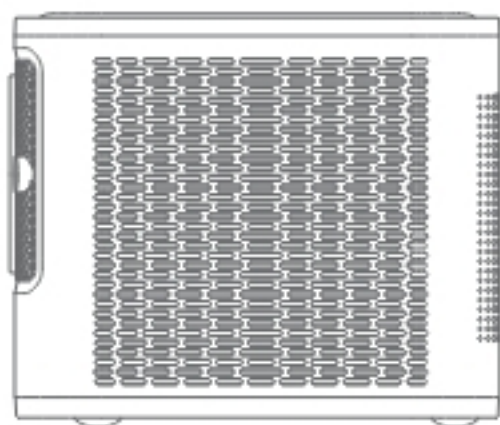 


Area on the left

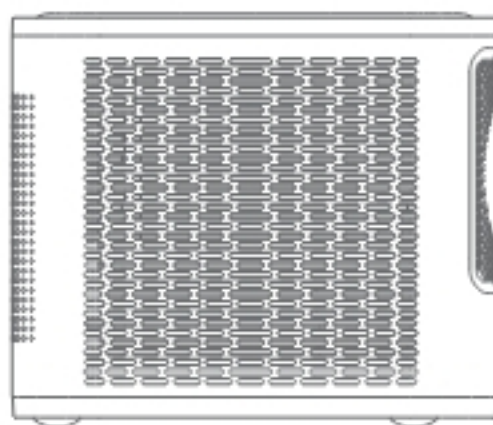 


Area on the Right

## Back / Bottom

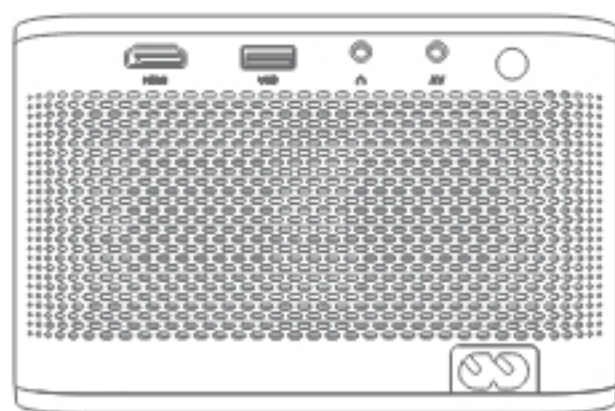 


foot pad      Manual lift bracket

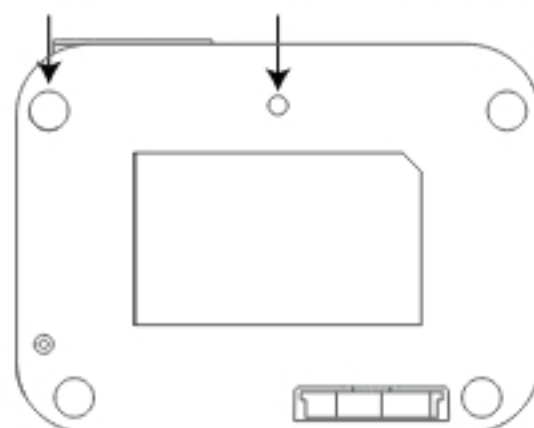 







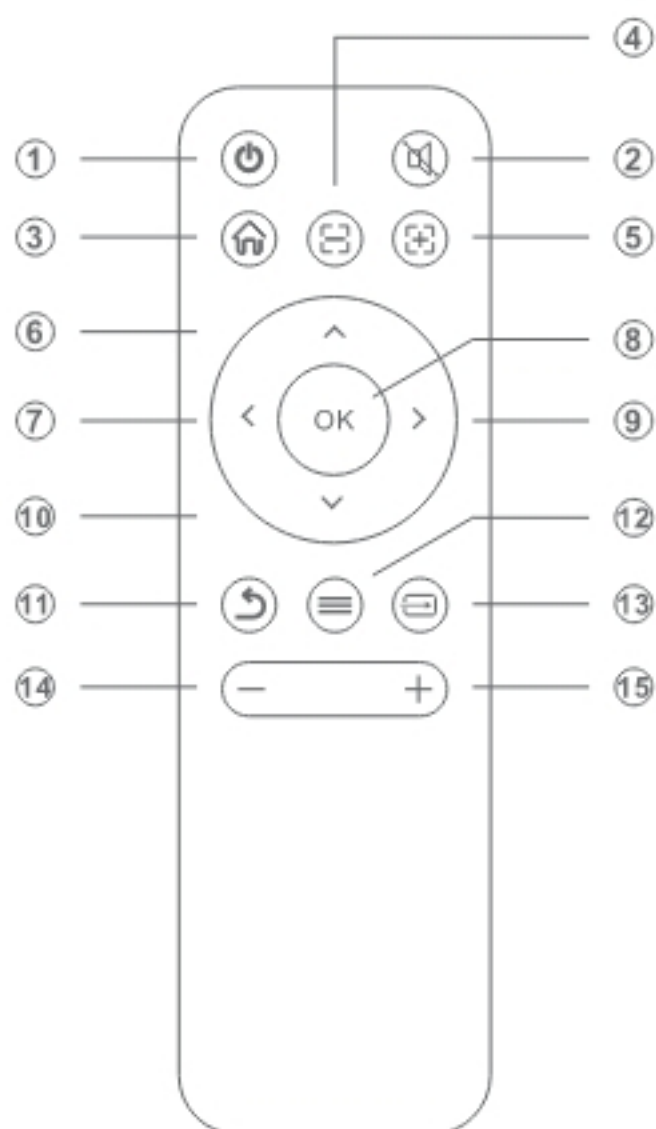 




Dust net port



## Remote Control



 
1. Power
2. Mute
3. Home
4. Focus
5. Focus
6. UP
7. Left
8. OK
9. Right
10. Down
11. Return
12. Menu
13. Signal Source
14. Vol-
15. Vol+

	turns the projector on or off	OK	selects and confirms options
	turns off sound		accesses projector menu system
	selects upward movement		Cancels/exits functions
	selects leftward movement		back to homepage
	selects rightward movement	-	adjusts speaker volume
	selects downward movement	+	adjusts speaker volume
	Focus		Focus

# Setting Up the Projector

Before projecting, please be familiar with the following suggestions of placement, installation and adjustment.

## Projector Placement and Installation

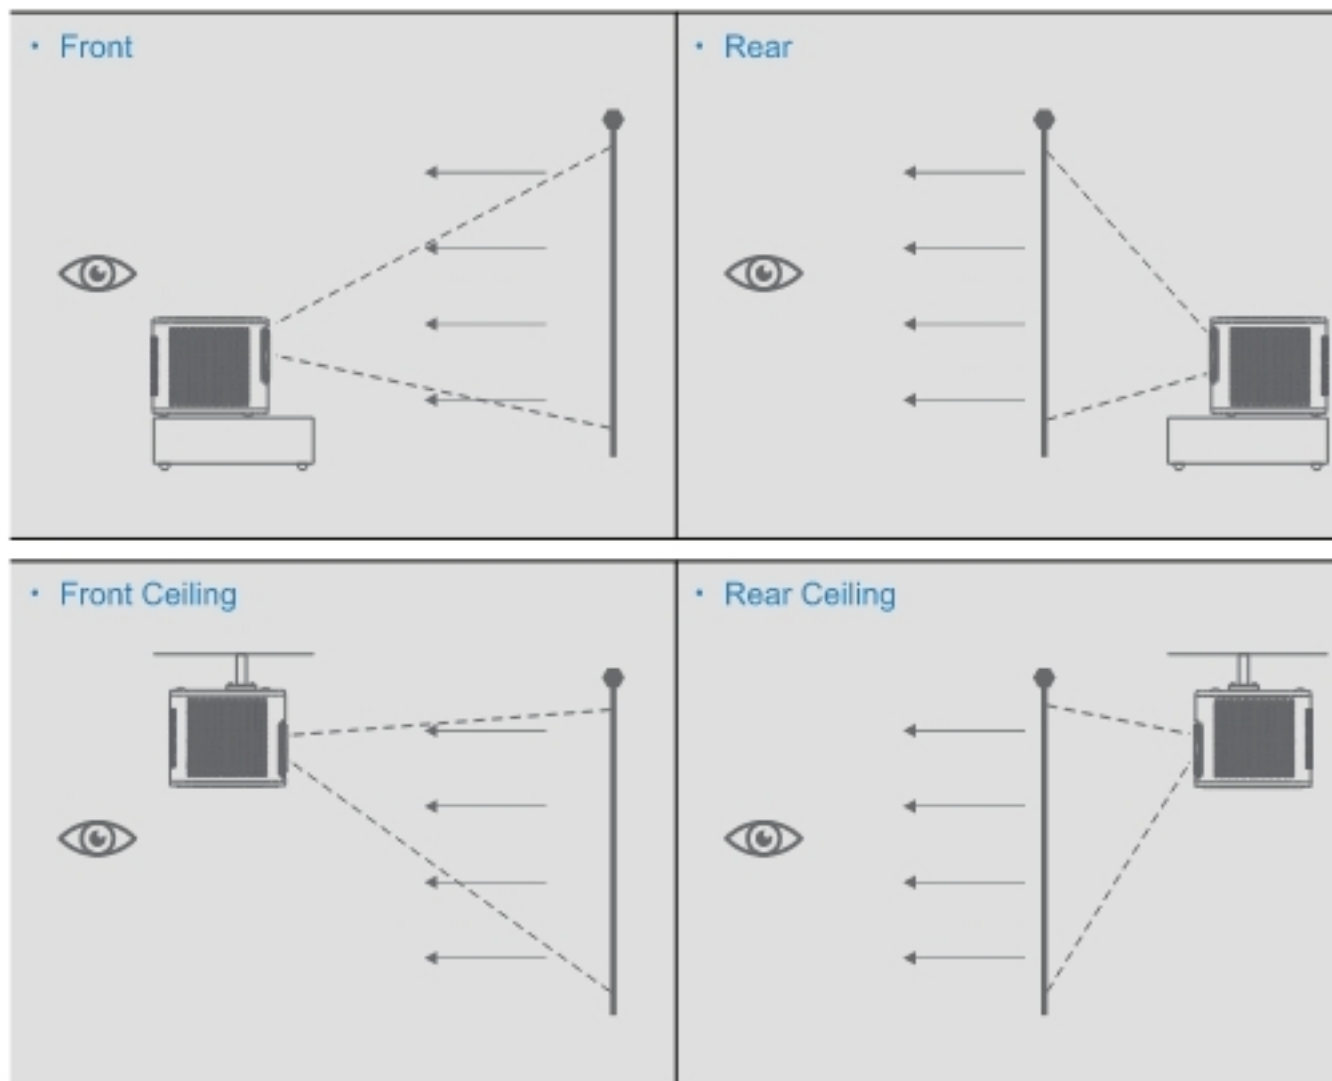


**Whether the way you choose to project your images or videos, please keep these suggestions in mind:**


1. Ensure the place you set the projector is sturdy and even;
2. Do not block the vents and always leave enough space for heat dissipation;
3. If the way you project is from the ceiling or from the rear, please ensure to select the correct projection option in the menu system.

## Projection Distance and Screen Size

 The throw distance, zoom factor, aspect ratio, and other settings determine the approximate size of the image. Please refer to the following table for the relationship between projection distance and image size.

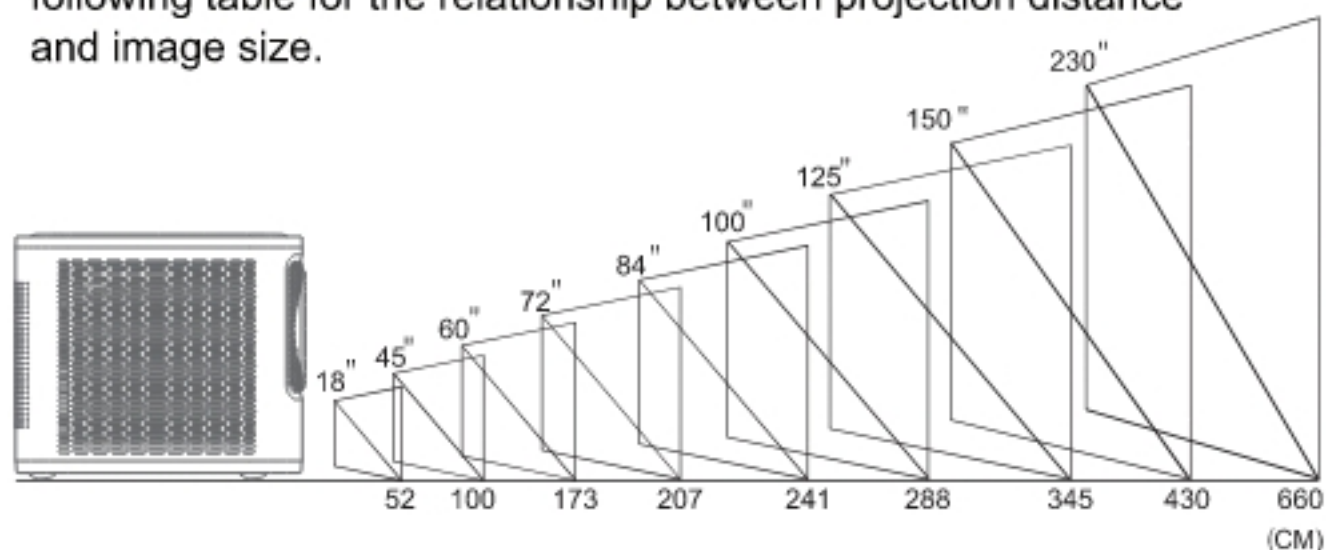


## Projector Adjustment

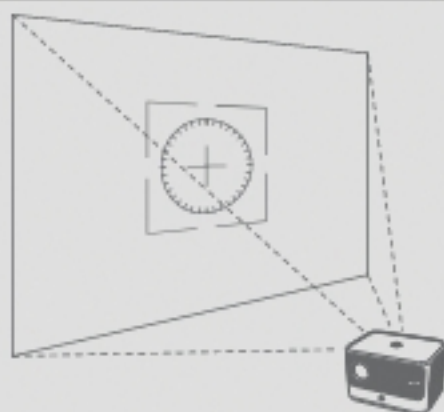 


This product will automatically adjust the focus to help you get a clear picture, and you can also adjust it by remote control if needed.

 Correct distortion by Auto or digital keystone.

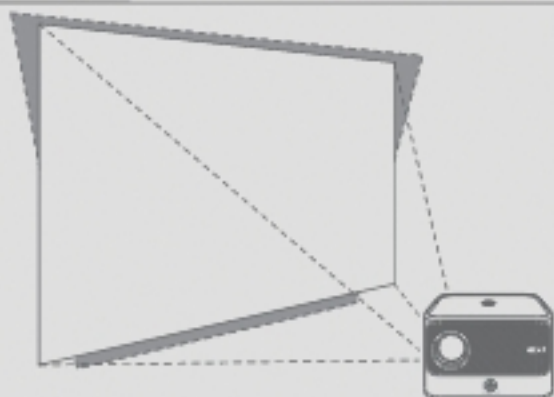

# Trapezoidal correction

 
Place the projector up and down the angle,  
the projector will automatically correct to the best picture.

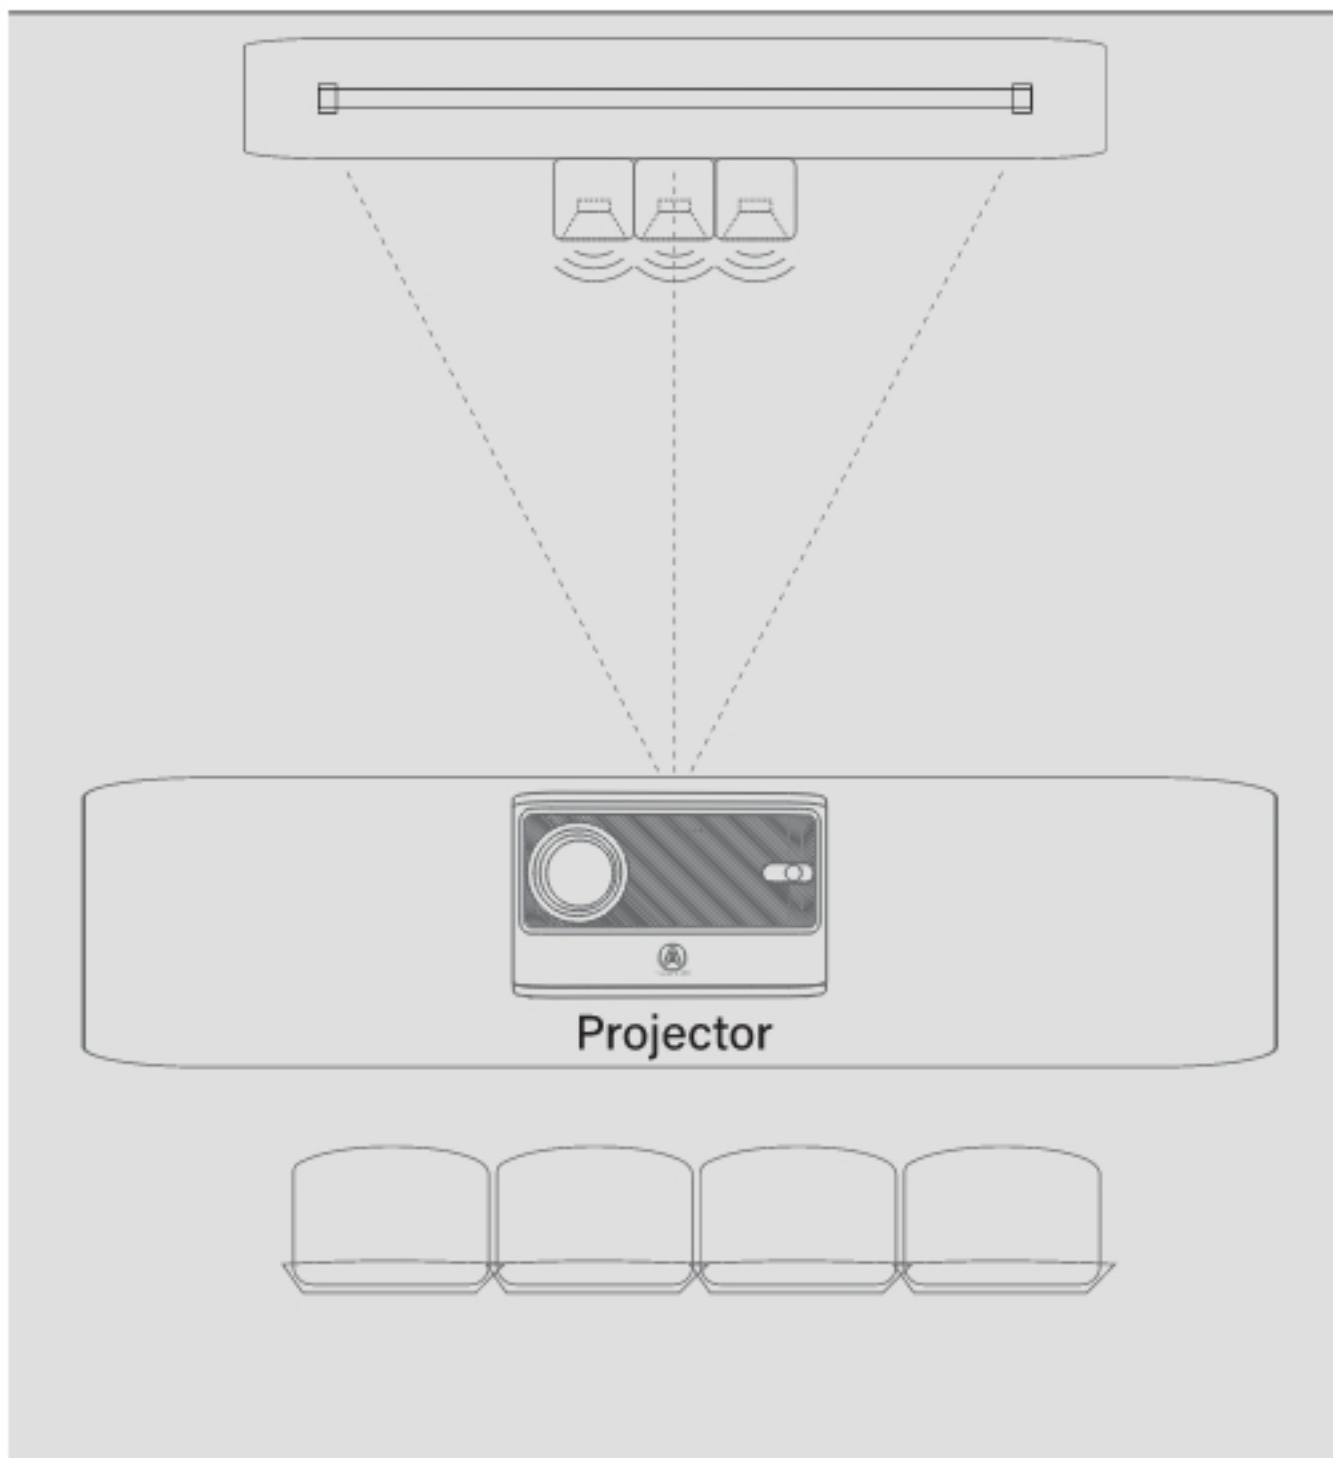

# Basic Projector Operations

Basic operations help you learn to operate projector quickly.

 
- Power on the projector

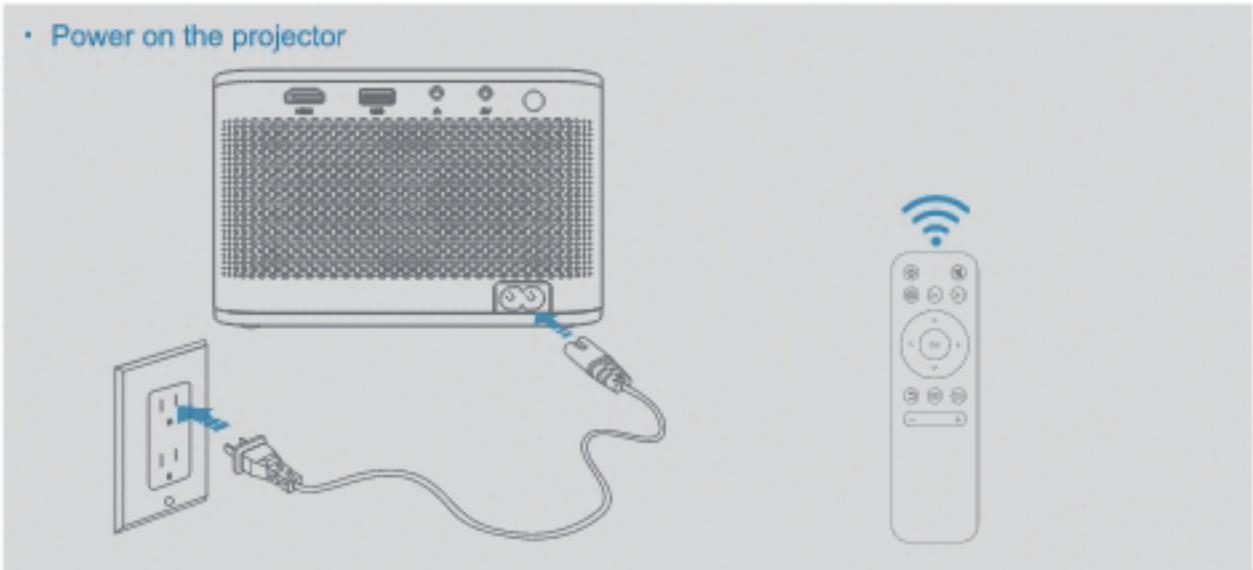

The indicator light will come on when the projector is powered up. Then press the Power button on the projector or on the remote control, it will show user interface within 2 to 5 seconds on screen.

## WiFi connection guide

 - Settings

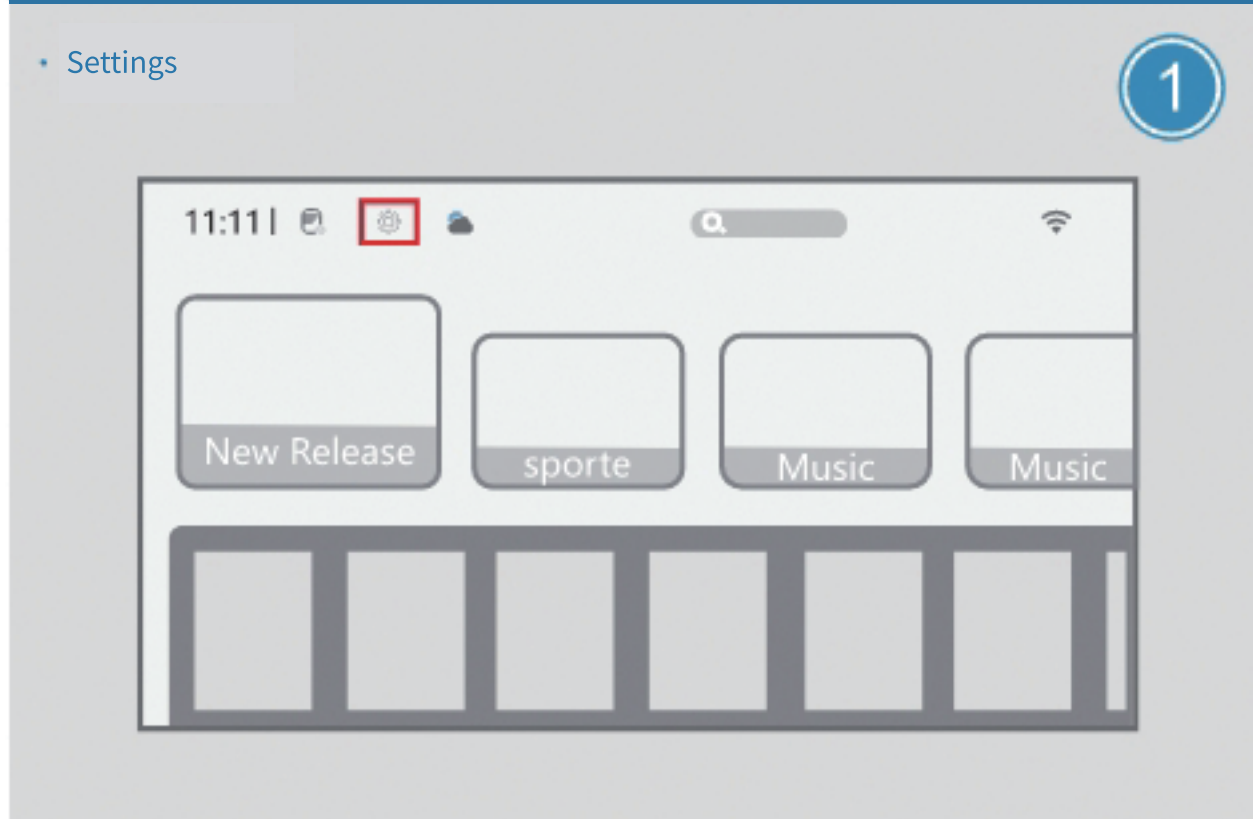


Select the home page settings function


# Projector Connections

 You can connect the projector to a USB device, an audio source, an HDMI device to enjoy your presentation, images, or other videos, with premium sound.

## Introduction to Ports

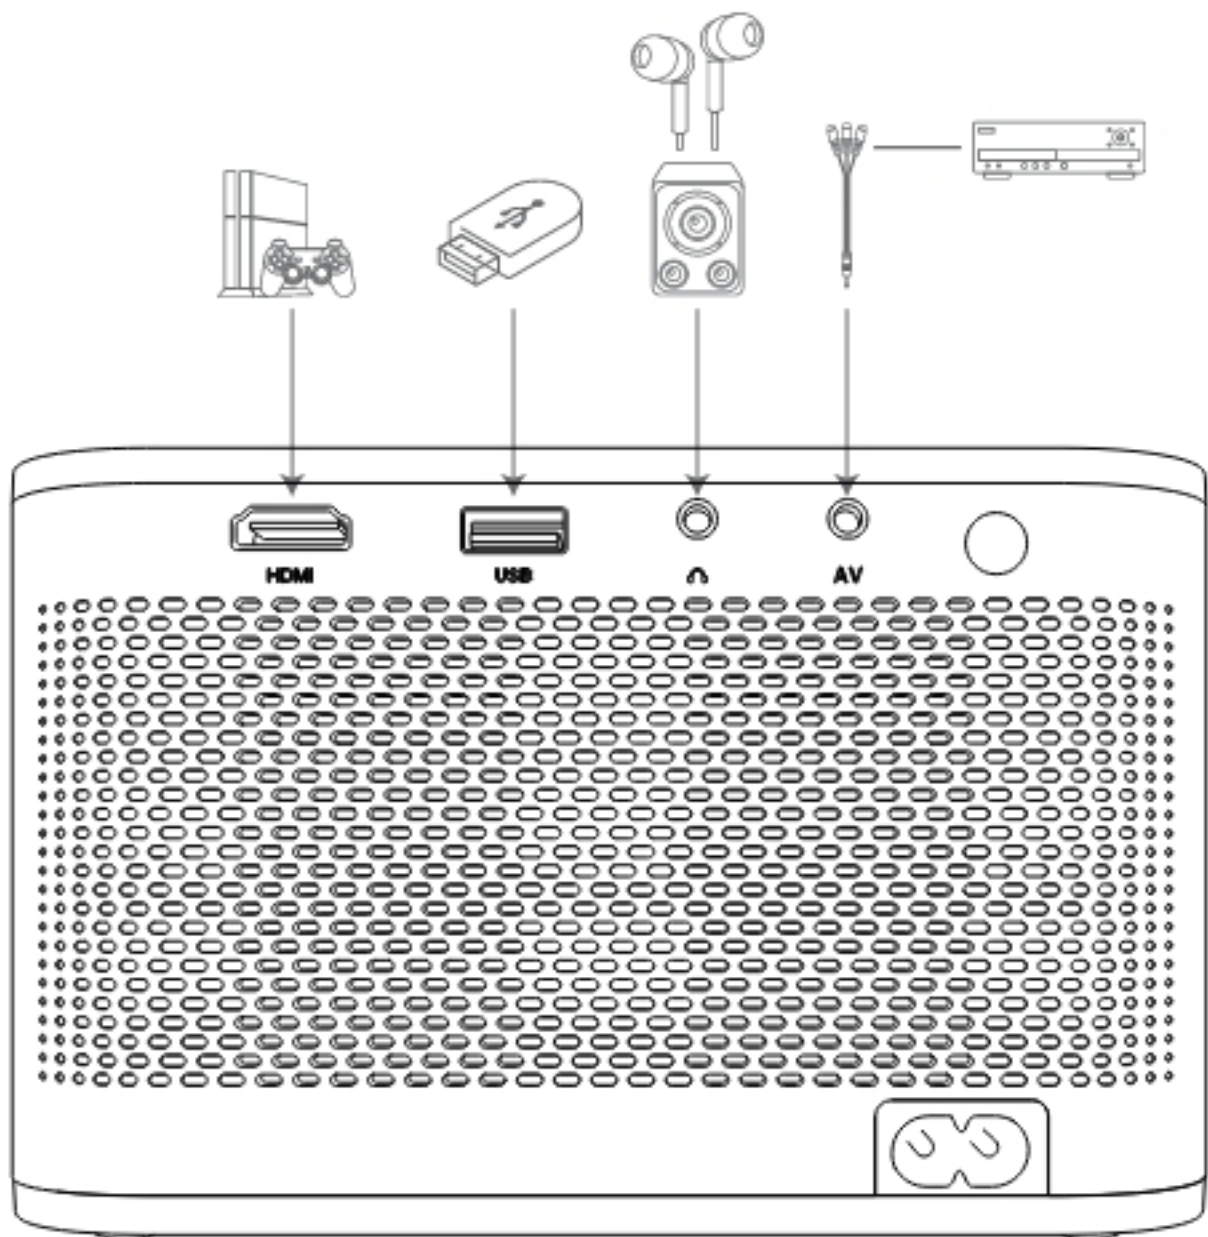


## Connecting to a device

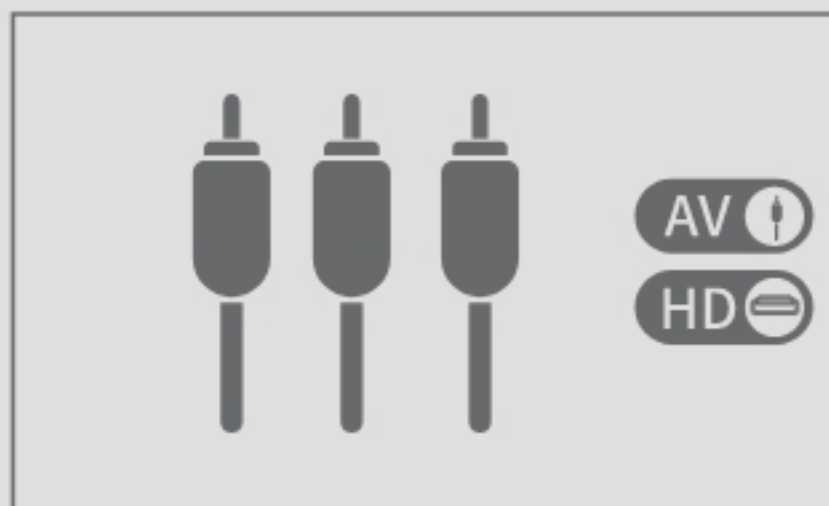 



Note: Source for HDMI USB.

## Connecting to a computer

The shortcut keys for output signals from different brands are different. See the computer manual for details.

(1) Press the windows key  + P key on the keyboard and select "Copy".





(2) Find the button of the " " symbol on the F1~F12 buttons on the keyboard, and press the Fn button at the same time to select "Copy".

Common key combinations are as follows:

 
Lenovo	Fn+F3	Fujitsu	Fn+F10
Dell	Fn+F8	Haier	Fn+F3
HP	Fn+F4	NEC	Fn+F3
ThinkPad	Fn+F7	Panasonic	Fn+F3
Asus	Fn+F8	Sharp	Fn+F5
Acer	Fn+F5	Hitachi	Fn+F7
Samsung	Fn+F4	TOSHIBA	Fn+F5
Sony	Fn+F7		

Note: The above content is for reference only, please refer to the computer manual

# Projector Cleaning and Maintenance

	<p>For optimum watching experiences and longer lifetime, please clean the projector periodically.</p>
	<p>For projector maintenance, please seek help from or under the guidance of specified persons.</p>
	<p>If it is necessary to replace any parts of the projector, please feel free to contact the dealer or qualified customer service team.</p>
	<p>Before cleaning and maintaining the projector, please turn off the projector and unplug the power cord.</p>

## Projector Cleaning

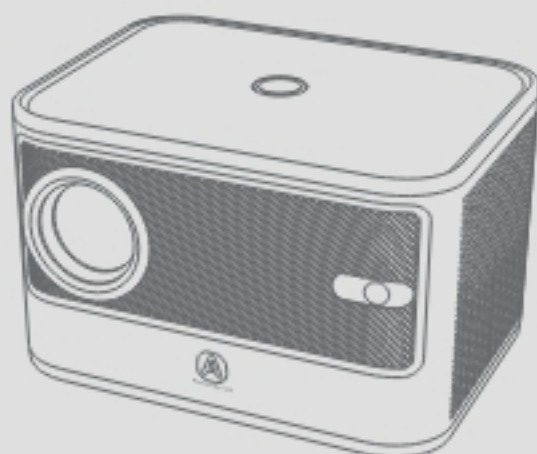

Always keep the projector clean to avoid affecting images quality and ventilation system during working caused by dust, dirt and smudge.





## Cleaning the Projector Case

Use a piece of dry, soft and lint-free cloth to remove dust or dirt;



 
Use a piece of moistened and soft cloth with a little water and mild soap to remove stubborn dirt.

## Cleaning the Lens

Gently wipe the lens with a piece of dry and non-abrasive cloth or paper to remove dust or dirt;




Gently wipe the lens by a piece of moistened (with a little water), non-abrasive and lint-free cloth to remove stubborn dirt.

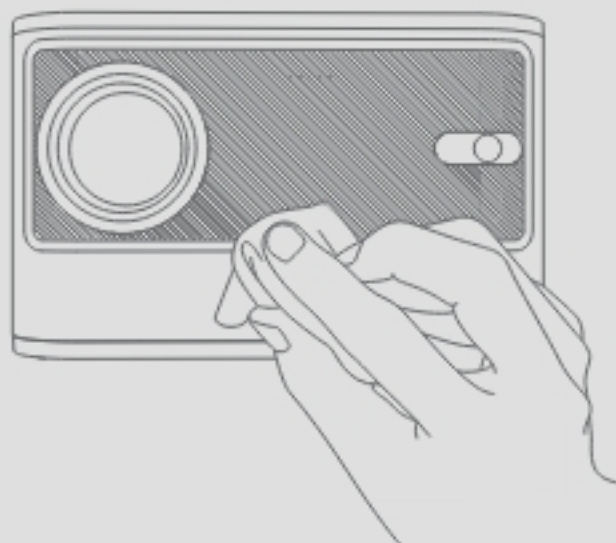

## Cleaning the Vents

 
Use a soft brush or a special designed small vacuum to remove the dust.

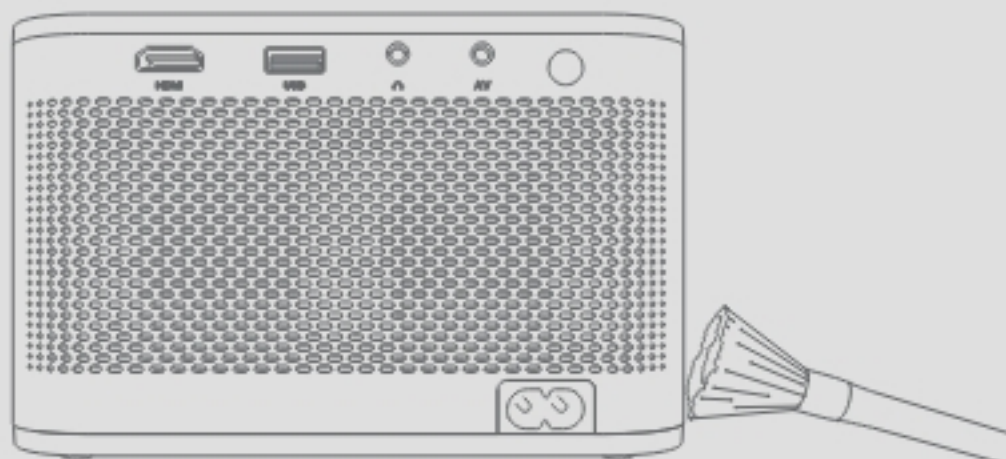


- Note: For cleaning process, do Not spray any liquid (included water) directly on any parts of the projector. Do Not use the chemical liquid to clean the projector which will damage the projector.



## Batteries Replacement of the Remote Control

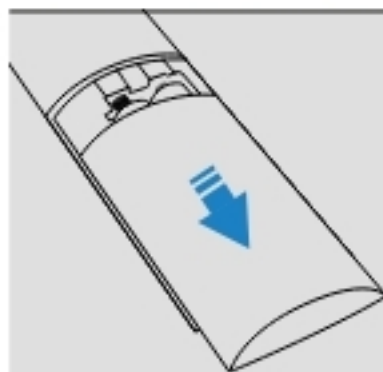 

 1. Open battery cover of the remote control;

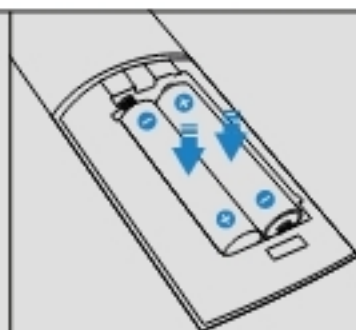

2. Insert batteries with the + and - ends as the indicators on the battery box showed;



3. Close battery cover of the remote control properly.

# Technical Specifications

To know product better and use projector properly, please read the table below:

Native Resolution	1280x720 pixels
Light	LED
Keystone	Remote Adjust The Focus
Projection size	18-230 inches
Projection Distance	0.5~6.6 M
Aspect Ratio	16:9 4:3
Interface	1 x 3.5mm Audio Jack
	1 x HDMI Port
	1 x USB Port
	1 x AV Port
	1 x Power Adapter Port
Consumption	65W
Power Supply	110-240V
Operating Temperature	-10°C~45°C
Supported Languages	Multi-Lingual
Package Accessories	Instruction Manual, Remote control Power cable
Product Size	161*120*102MM

# Troubleshooting

As a high-tech product, the projector combined with optical, mechanical and electronic components and equipped with a protective and complicated circuit inside. To quickly solve your problems and to prevent improper using and settings, please follow operations below. If your problems or enquiries cannot be eliminated after reading the table, please do not hesitate to contact us.

Problem Description	Troubleshooting
The projector won't turn on	Check if the power source is the indicated one and the power cord is connected correctly. Make sure the power cord is not defective.
Lamp does not work after turning on the projector	Ensure power cord and power source are connected correctly. If the lamp gets damages, please contact us to replace the lamp
No images	Check whether the format and resolution of images are supported by the projector.
No response from remote control	Check whether batteries of the remote control run out or are installed correctly. Make sure there is no obstacle between the remote control and IR receiver. Always use the remote control within its effective distance (4m).
Obscure/Blurred images	Please adjust the focus by pressing on the remote control, adjust the digital keystone correction and throw distance until the projected image is clear. Ensure the lens is clean.
Abnormal sound	Ensure the audio device is connected correctly and function well. Check if the mute or minimum volume mode is set.