





A004 Pro

FULL HD SMART  
PROJECTOR

User Guide

English

Please read this user's guide carefully before operating the projector, and save this guide for future use.

**Thank you  
for purchasing  
our projector**








---

**If you have any further enquiries or need any  
further assistance, please contact us**

# Precautions for Use

Follow these safety instructions and read these helpful tips before setting up and using the projector.

## Important Safety Instructions

	Do not disassemble the projector. If needed, please contact your dealer for repair/replacement.
	Do not use the different power source, it may result in fire or electric shock. Please use the indicated type of power source.
	Do not look into the lens when the projector is operating. The bright light may damage your eyes.
	Do not use the projector near water or sources of heat.
	Place the projector on an even surface or stable stand. If the projector is mounted on a ceiling, it should be installed by qualified mounting hardware which designed for use with this projector.
	Unplug the projector after powering down.
	In order to maintain the performance and reliability of the projector, please leave at least 30CM between the projector and the wall.



 
## Helpful Tips

For incredible clarity and optimum results, operating the projector in a dark environment is recommended.



Projector is ideal for home entertainment, such as videos watching, photos viewing and games playing etc. Please be advised that the projector is not for business data presentation.

Please understand that the projector makes noise for heat dissipation during working. Nevertheless, it will not affect watching experiences when connected to an audio device.

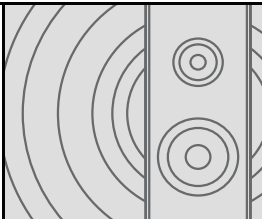

## Product Box Contents



Projector



Remote control



User Guide

 


Power cord

# Projector Features

projector includes these special and outstanding features:


## Incredible Watching Experiences

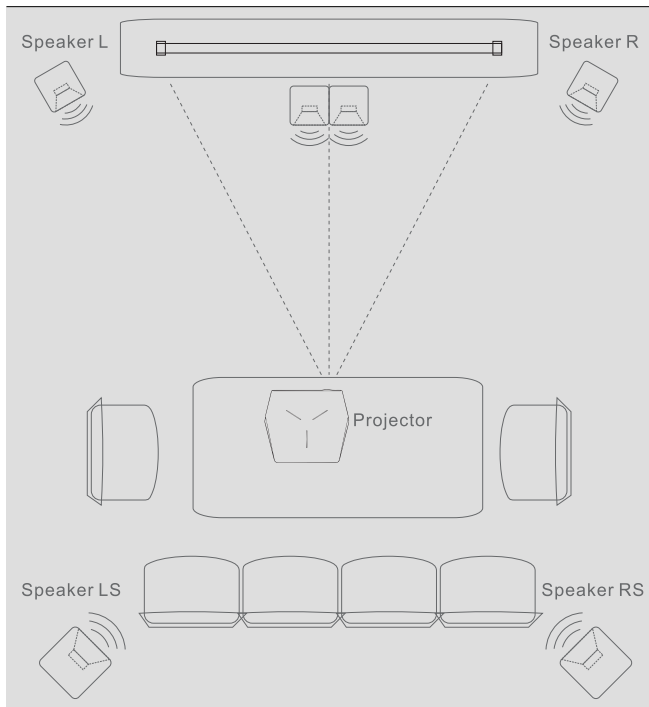


## Projector Ports and Connection Introduction

You can connect the projector to a USB device, an audio source, an AV equipment, or a HD device to enjoy your Presentation, images, or other videos, with premium sound.

   
- 1、Power Button
- 2、USB port
- 3、HD port
- 4、Audio jack
- 5、AV input port
- 6、Power port

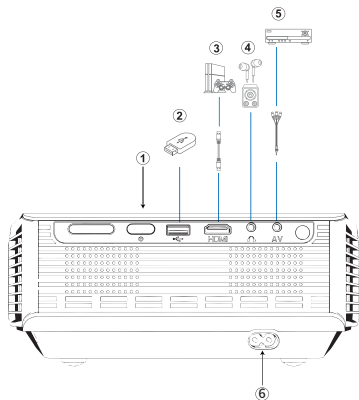



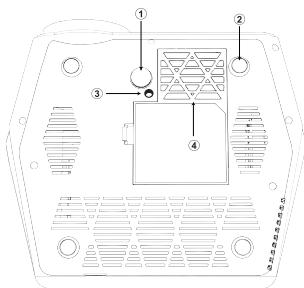



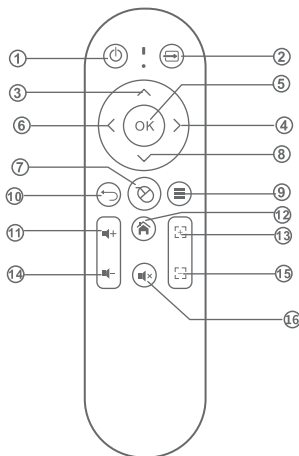

 

 


- 1、Manual lift bracket
- 2、foot pad
- 3、Mounting Hole
- 4、Dust net port



# Remote Control



 
1. Power on/off
- 2.Signal source
- 3.up
- 4.Right
- 5.Confirm selection
- 6.Left
- 7.mouse button
- 8.Down
- 9.Menu key
- 10.Return to top
- 11.Sound plus
- 12.Home
- 13.Focus+
- 14Sound minus
- 15Focus-
- 16.Mute

 turns the projector on or off	OK selects and confirms options
 Operate an app without buttons long press to switch to mouse mode	 accesses projector menu system
 selects upward movement	 cancels/exits functions
 selects leftward movement	 back to homepage
 selects rightward movement	 adjusts speaker volume
 selects downward movement	 adjusts speaker volume
 Focus	 Focus

# Setting Up the Projector

Before projecting, please be familiar with the following suggestions of placement, installation and adjustment.

## Projector Placement and Installation

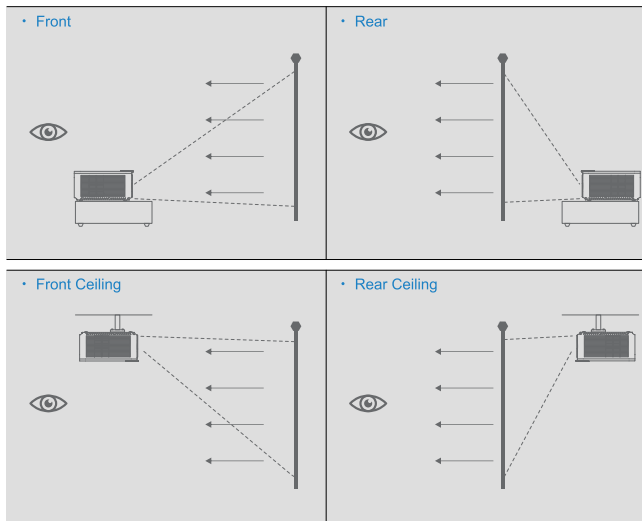


**Whether the way you choose to project your images or videos, please keep these suggestions in mind:**

1. Ensure the place you set the projector is sturdy and even;
2. Do not block the vents and always leave enough space for heat dissipation;
3. If the way you project is from the ceiling or from the rear, please ensure to select the correct projection option in the menu system.


## Projection Distance and Screen Size

 The throw distance, zoom factor, aspect ratio, and other settings determine the approximate size of the image. Please refer to the following table for the relationship between projection distance and image size.

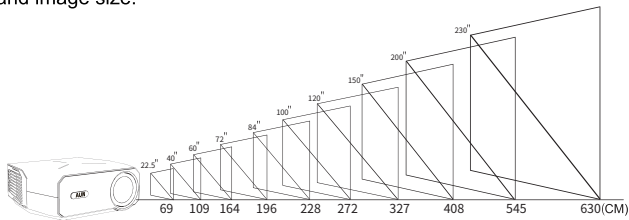

## Projector Adjustment

 
Except setting suitable throw distance, you can adjust the focus before projecting your images or videos:

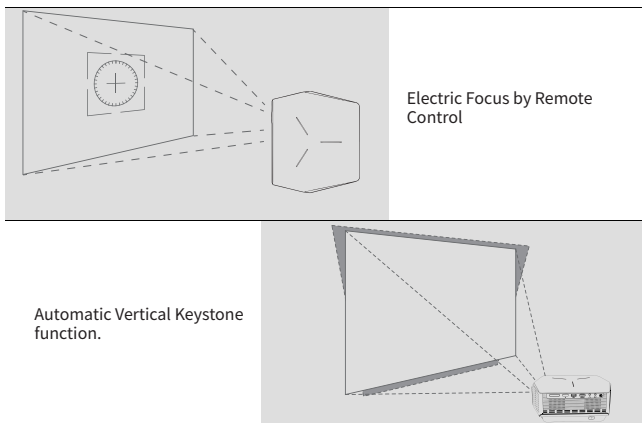

# Basic Projector Operations

Basic operations provided help you to get started quickly.

 - Power on the projector

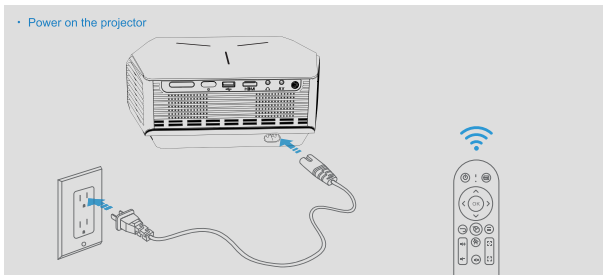

Indicator light will on after plugging in the power cord. Then press the Power button on the projector or on the remote control, it enters into multimedia interface within 2 to 5 seconds.

## wifi connection guide

- enter setting

 
1



Select the system settings function at the top of the interface.

## Enter Network


2

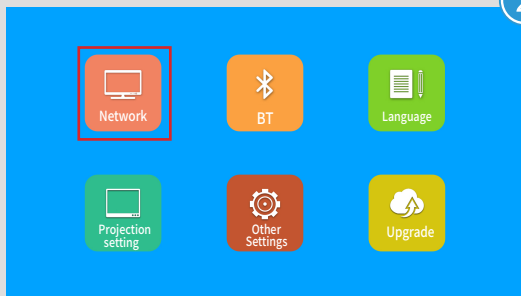

In the system settings interface, select network settings, select the corresponding network connection.

## BT Connection User Guide

 
1

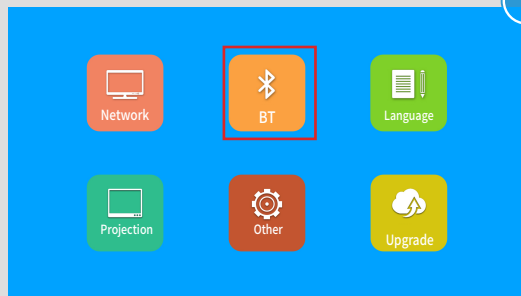

In the system settings interface, enter BT and select the corresponding device to connect.




## device connection

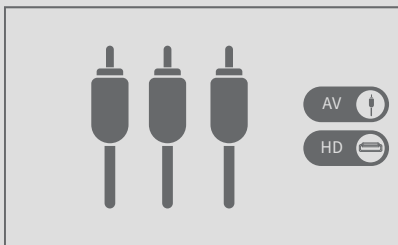 

## Connecting to a computer setting reference

The shortcut keys for output signals from different brands are different. See the computer manual for details.

(1) Press the windows key  + P key on the keyboard and select "Copy".

(2) Find the button of the " " symbol on the F1~F12 buttons on the keyboard, and press the Fn button at the same time to select "Copy".

Common key combinations are as follows:

Lenovo	Fn+F3	Fujitsu	Fn+F10
Dell	Fn+F8	Haier	Fn+F3
HP	Fn+F4	NEC	Fn+F3
ThinkPad	Fn+F7	Panasonic	Fn+F3
Asus	Fn+F8	Sharp	Fn+F5
Acer	Fn+F5	Hitachi	Fn+F7
Samsung	Fn+F4	TOSHIBA	Fn+F5
Sony	Fn+F7		

**Note:** The above content is for reference only, please refer to the computer manual

# Projector Cleaning and Maintenance



For optimum watching experiences and longer lifetime, please clean the projector periodically.



For projector maintenance, please seek help from or under the guidance of specified persons.

 


If it is necessary to replace any parts of the projector, please feel free to contact the dealer or qualified customer service team.



Before cleaning and maintaining the projector, please turn off the projector and unplug the power cord.

## Projector Cleaning

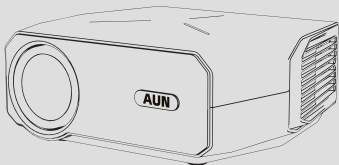


Always keep the projector clean to avoid affecting images quality and ventilation system during working caused by dust, dirt and smudge.



## Cleaning the Projector Case

 
Use a piece of dry, soft and lint-free cloth to remove dust or dirt;

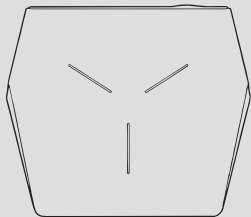

Use a piece of moistened and soft cloth with a little water and mild soap to remove stubborn dirt.

## Cleaning the Lens

 
Gently wipe the lens with a piece of dry and non-abrasive cloth or paper to remove dust or dirt;

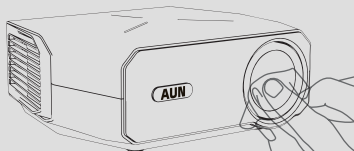


Gently wipe the lens by a piece of moistened (with a little water), non-abrasive and lint-free cloth to remove stubborn dirt.

## Cleaning the Vents

 
Use a soft brush or a special designed small vacuum to remove the dust.

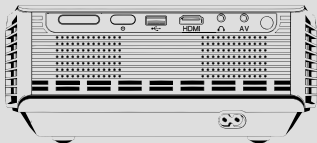

 
- Note: For cleaning process, do Not spray any liquid (included water) directly on any parts of the projector. Do Not use the chemical liquid to clean the projector which will damage the projector.

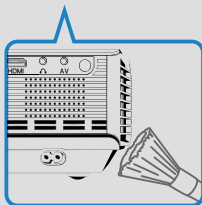


## Batteries Replacement of the Remote Control

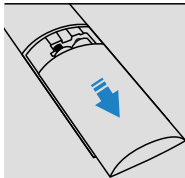 

 1. Open battery cover of the remote control;

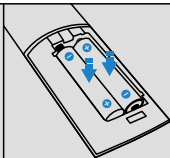

 2. Insert batteries with the + and – ends as the indicators on the battery box showed;

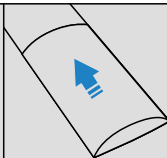

3. Close battery cover of the remote control properly.

## Projector Maintenance

For this part, we only offer the basic maintaining suggestions. If you have any further requirements (replacement or repair), please contact the dealer or qualified customer service team.

## Technical Specifications

To know product better and use projector properly, please read the table below:

Native Resolution	1920 x 1080 pixels	Consumption	70W±10W
Light	LED	Power Supply	AC 90~260V
Screen Size	47-250inches	Operating temperature	-10°C~45°C
Projection Distance	1.39-6.80M	Supported Languages	multi-lingual
Interface	1 x Audio Out	1 x HD	1 x USB
	1 x AV	1 x Power port	
Display Ratio Screen Scale	4:3/16:9	Product Size	216*237*92mm

## Troubleshooting

As a high-tech product, the projector combined with optical, mechanical and electronic components and equipped with a protective and complicated circuit inside. To quickly solve your problems and to prevent improper using and settings, please follow operations below. If your problems or enquiries cannot be eliminated after reading the table, please do not hesitate to contact us.

Problem Description	Troubleshooting
The projector won't turn on	Check if the power source is the indicated one and the power cord is connected correctly. Make sure the power cord is not defective.
Lamp does not work after turning on the projector	Ensure power cord and power source are connected correctly. If the lamp gets damages, please contact us to replace the lamp
No images	Check whether the format and resolution of images are supported by the projector.
No response from remote control	Check whether batteries of the remote control run out or are installed correctly. Make sure there is no obstacle between the remote control and IR receiver. Always use the remote control within its effective distance (4m).
Obscure/Blurred images	Please adjust the focus, adjust the keystone and throw distance until the projected image is clear. Ensure the lens is clean.
Abnormal sound	Ensure the audio device is connected correctly and function well. Check if the mute or minimum volume mode is set.

